
 




Charging

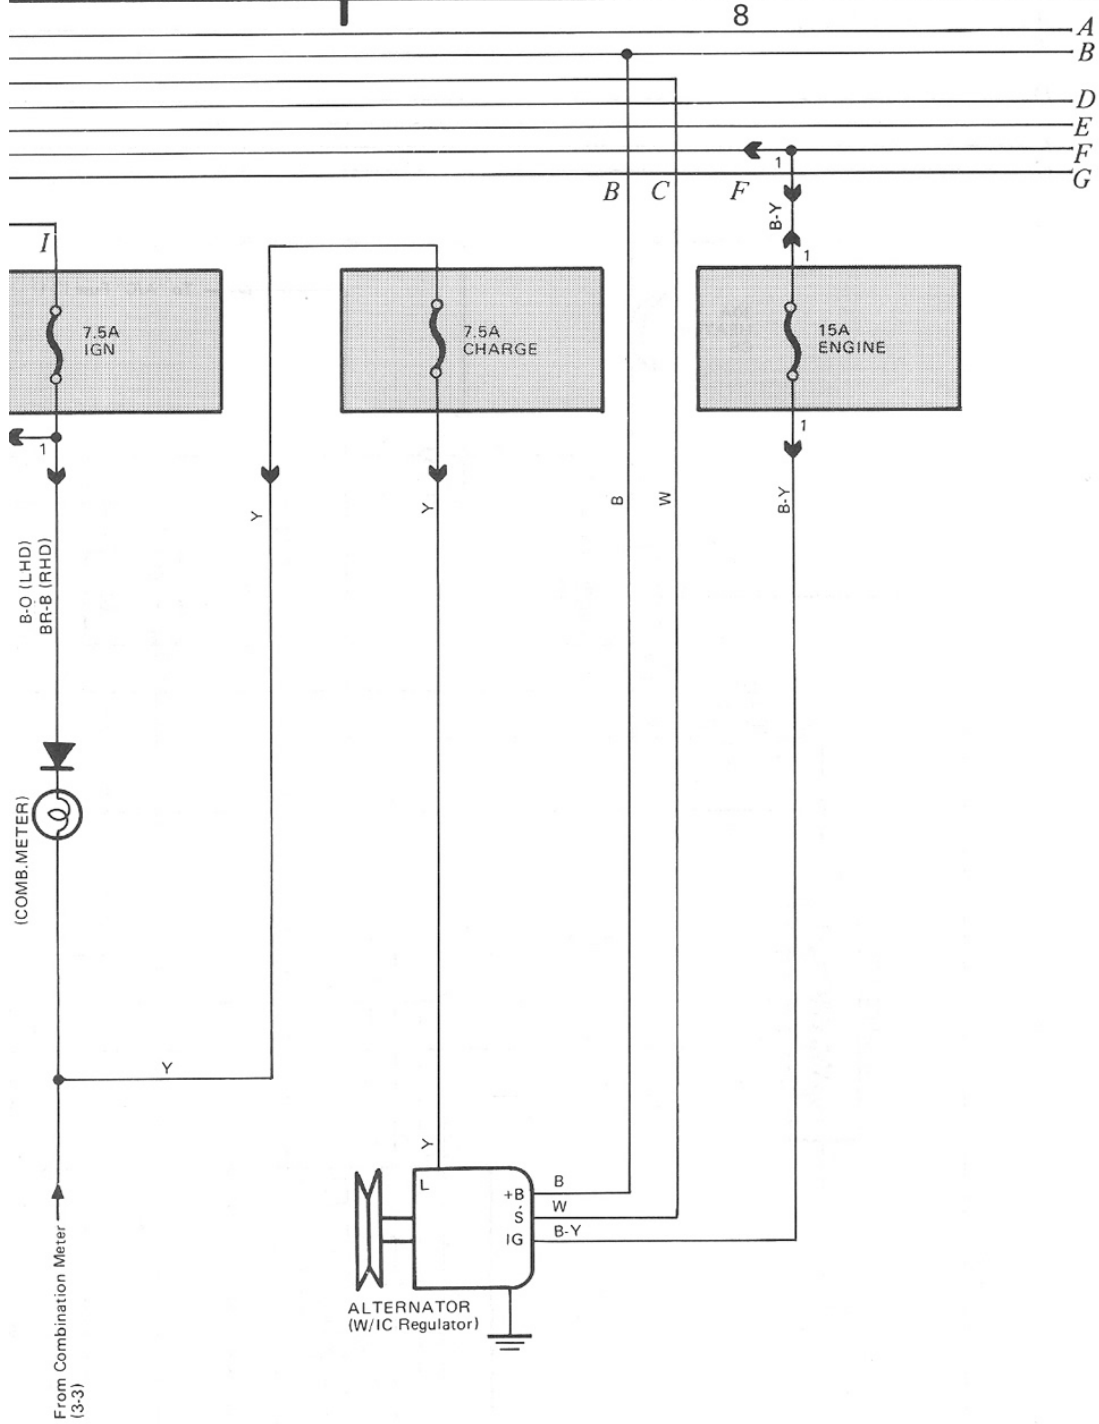


a  
b  
d  
f



6

7

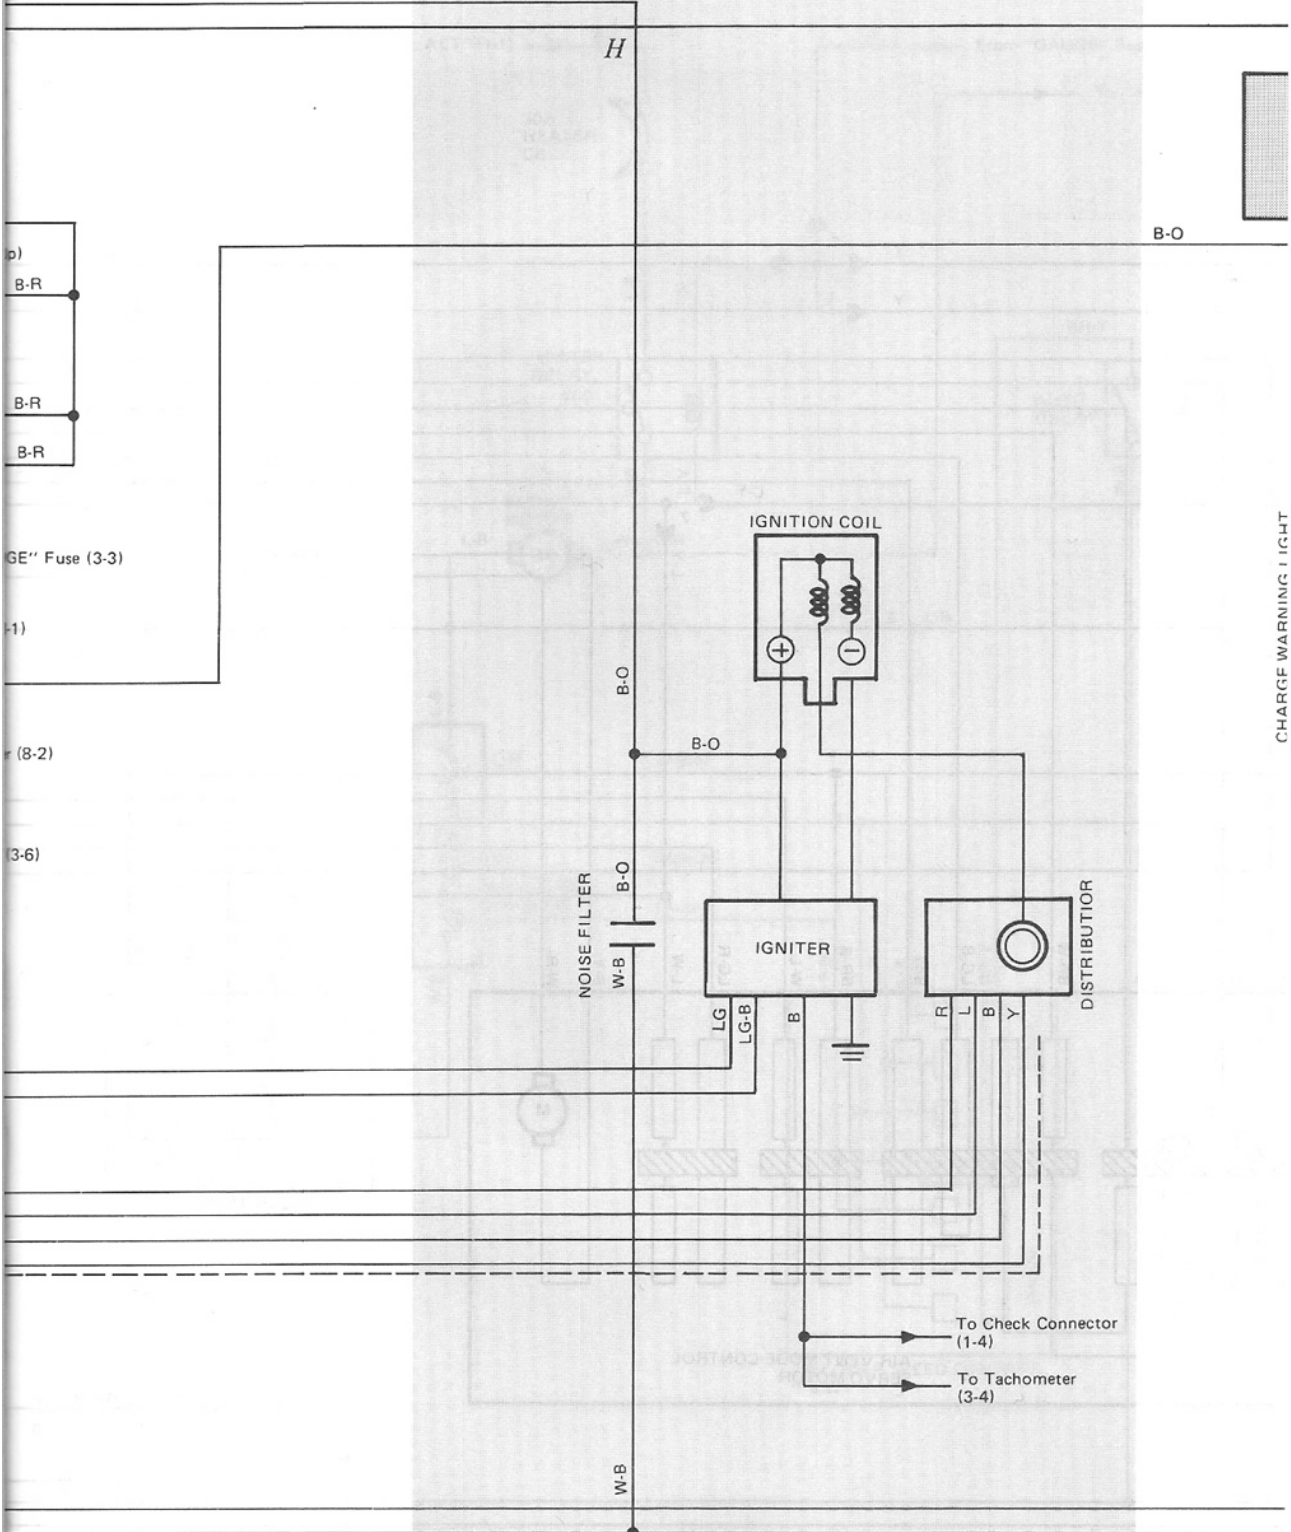

p)  
B-R  
B-R  
B-R

GE'' Fuse (3-3)

-1)

r (8-2)

(3-6)

B-O

H

B-O

B-O

B-O

W-B

W-B

IGNITION COIL

IGNITER

DISTRIBUTOR

To Check Connector  
(1-4)

To Tachometer  
(3-4)

CHARGE WARNING LIGHT





EFI

4

5

B-R

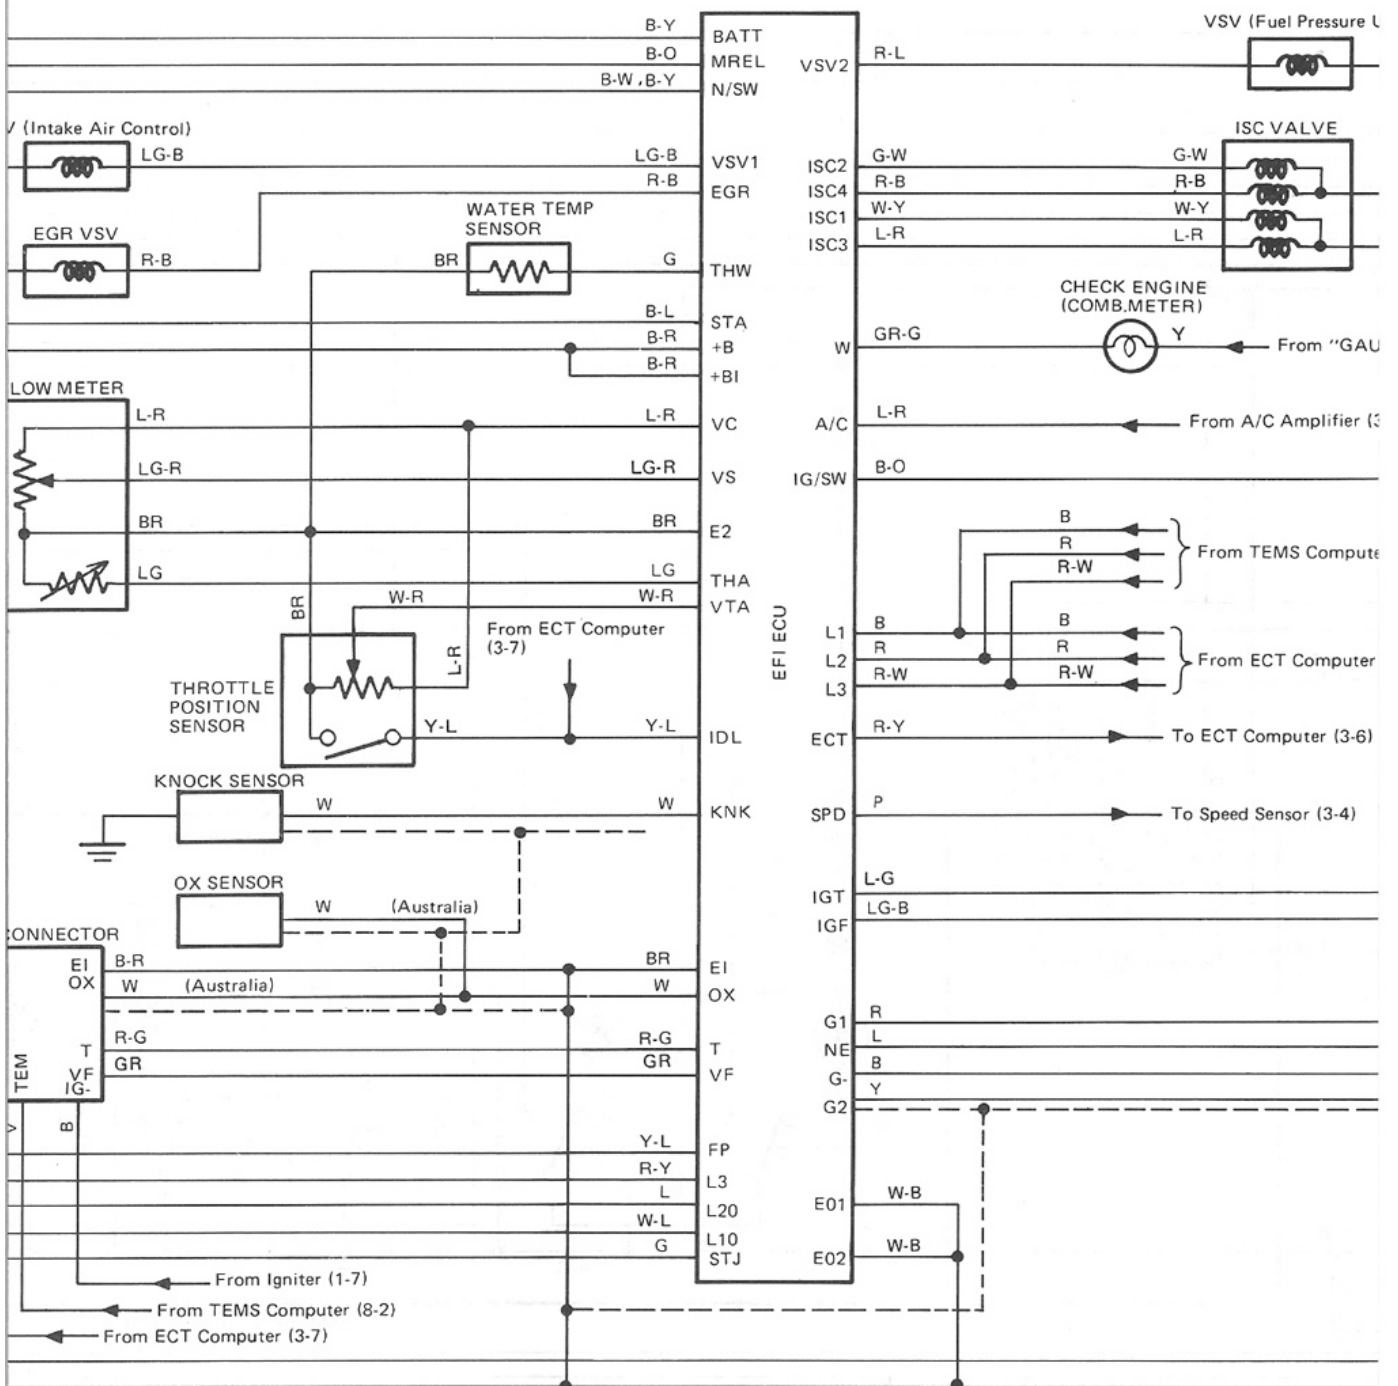

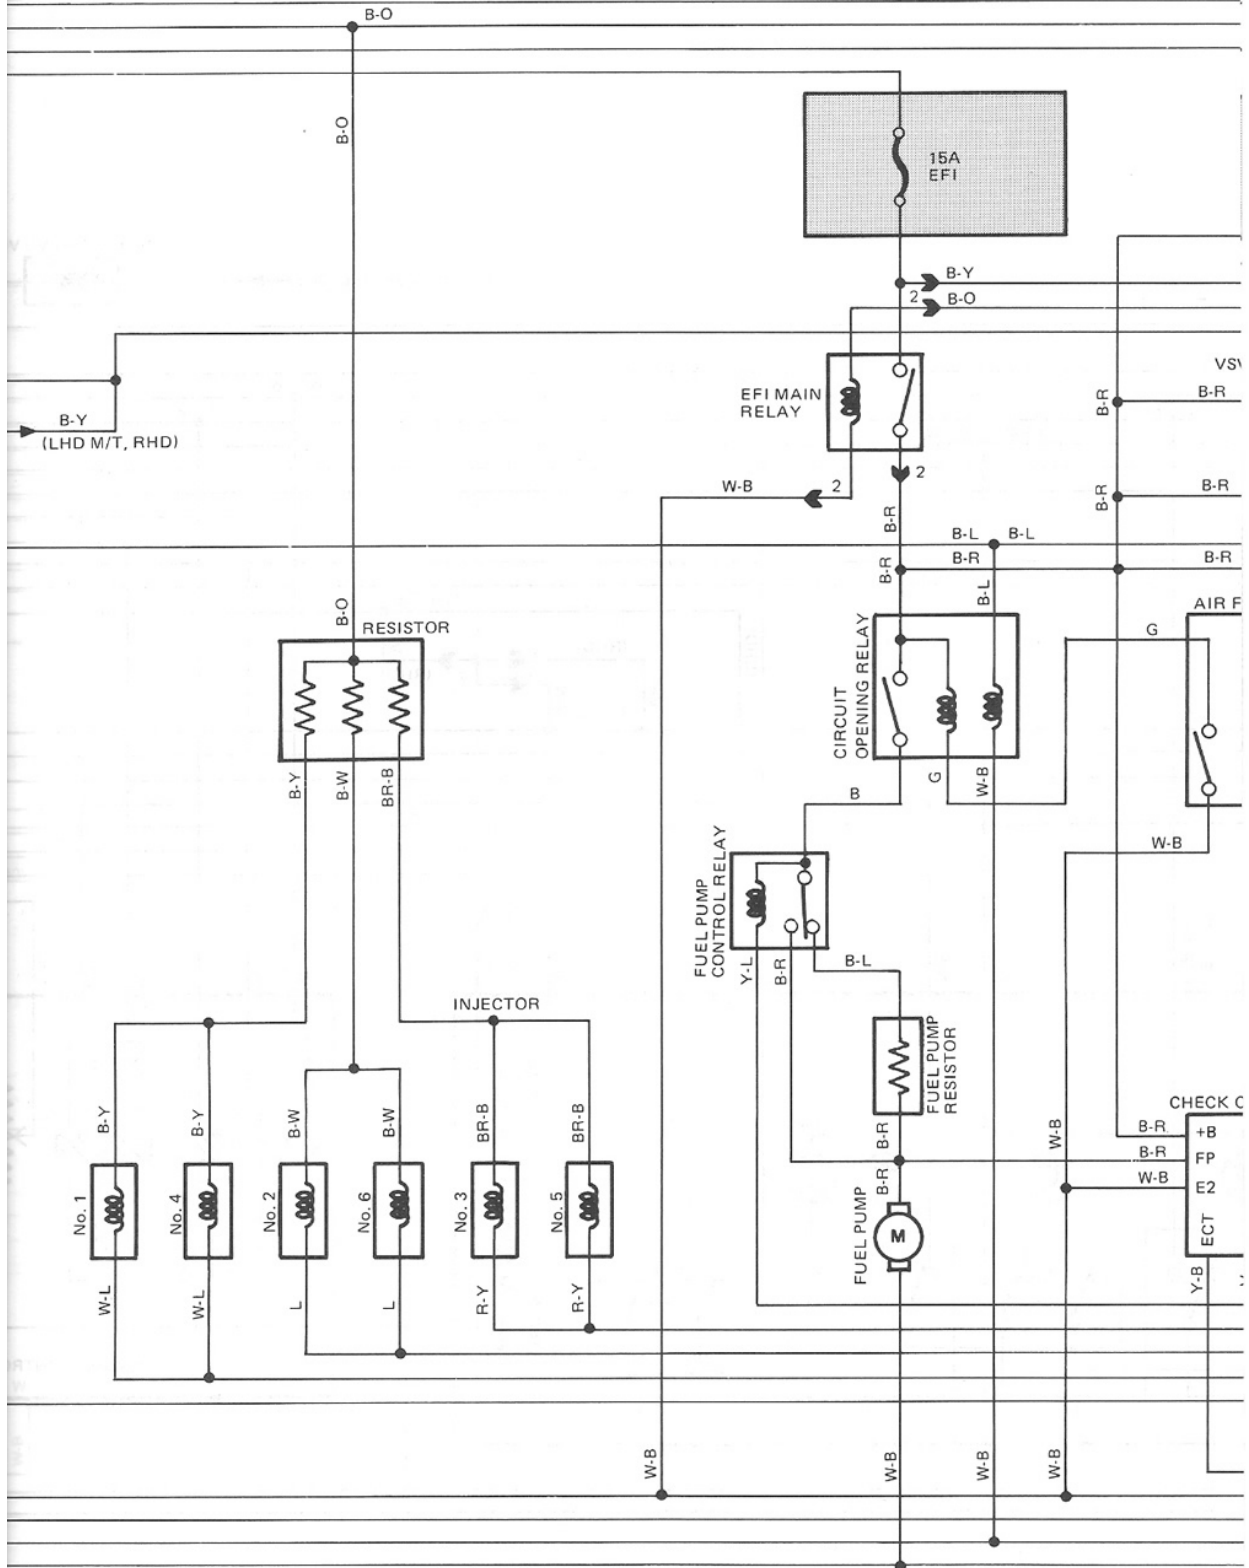

*d* = Located under right front pillar (LHD)  
 Located under left front pillar (RHD)


*f* = Located on center of back panel




# TOYOTA SUPRA ELECTRICAL WIRING DIAGRAM-1986 Production V



 Power Source



Starting

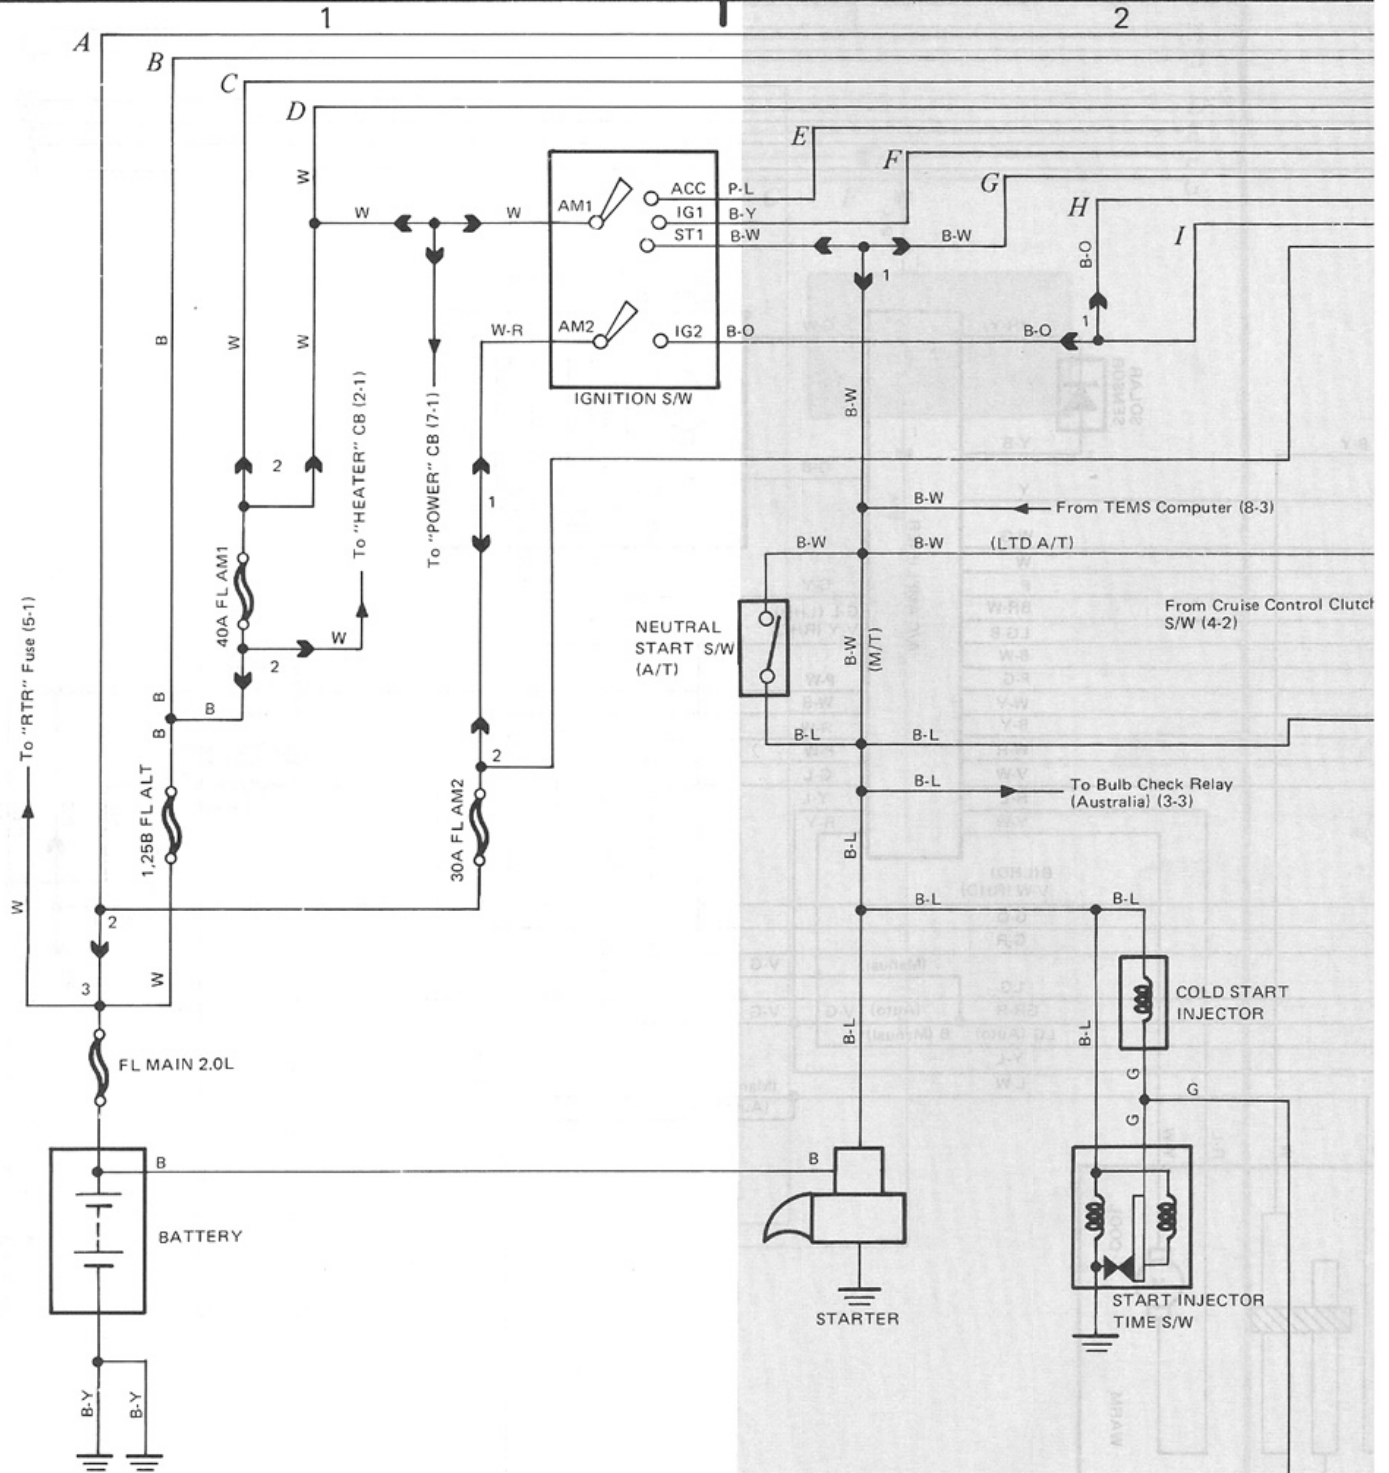


Ground points

*a* = Located on left front fender

*b* = Located on engine block

- a* \_\_\_\_\_
- b* \_\_\_\_\_
- d* \_\_\_\_\_
- f* \_\_\_\_\_

# 2 TOYOTA SUPRA (Cont'd)

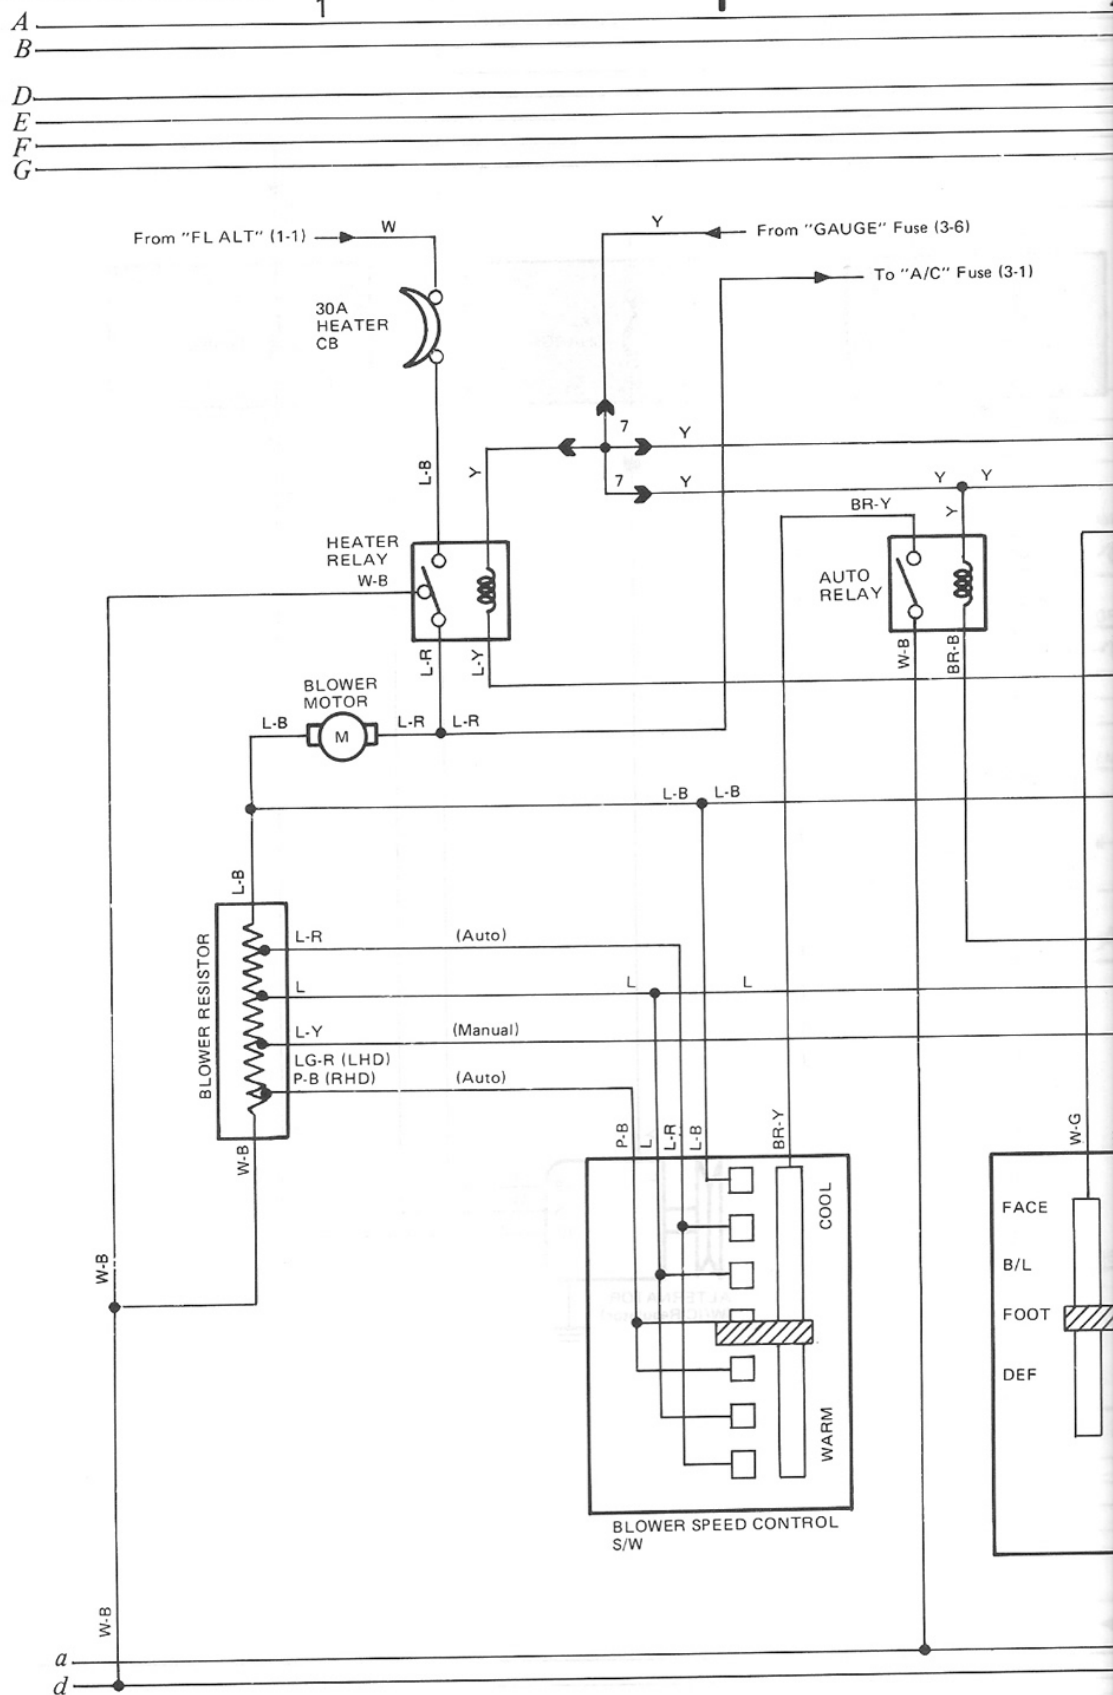


Ground points

c = Located under left front pillar (LHD)  
 Located under right front pillar (RHD)

d = Located under right front  
 Located under left front

(3-1)

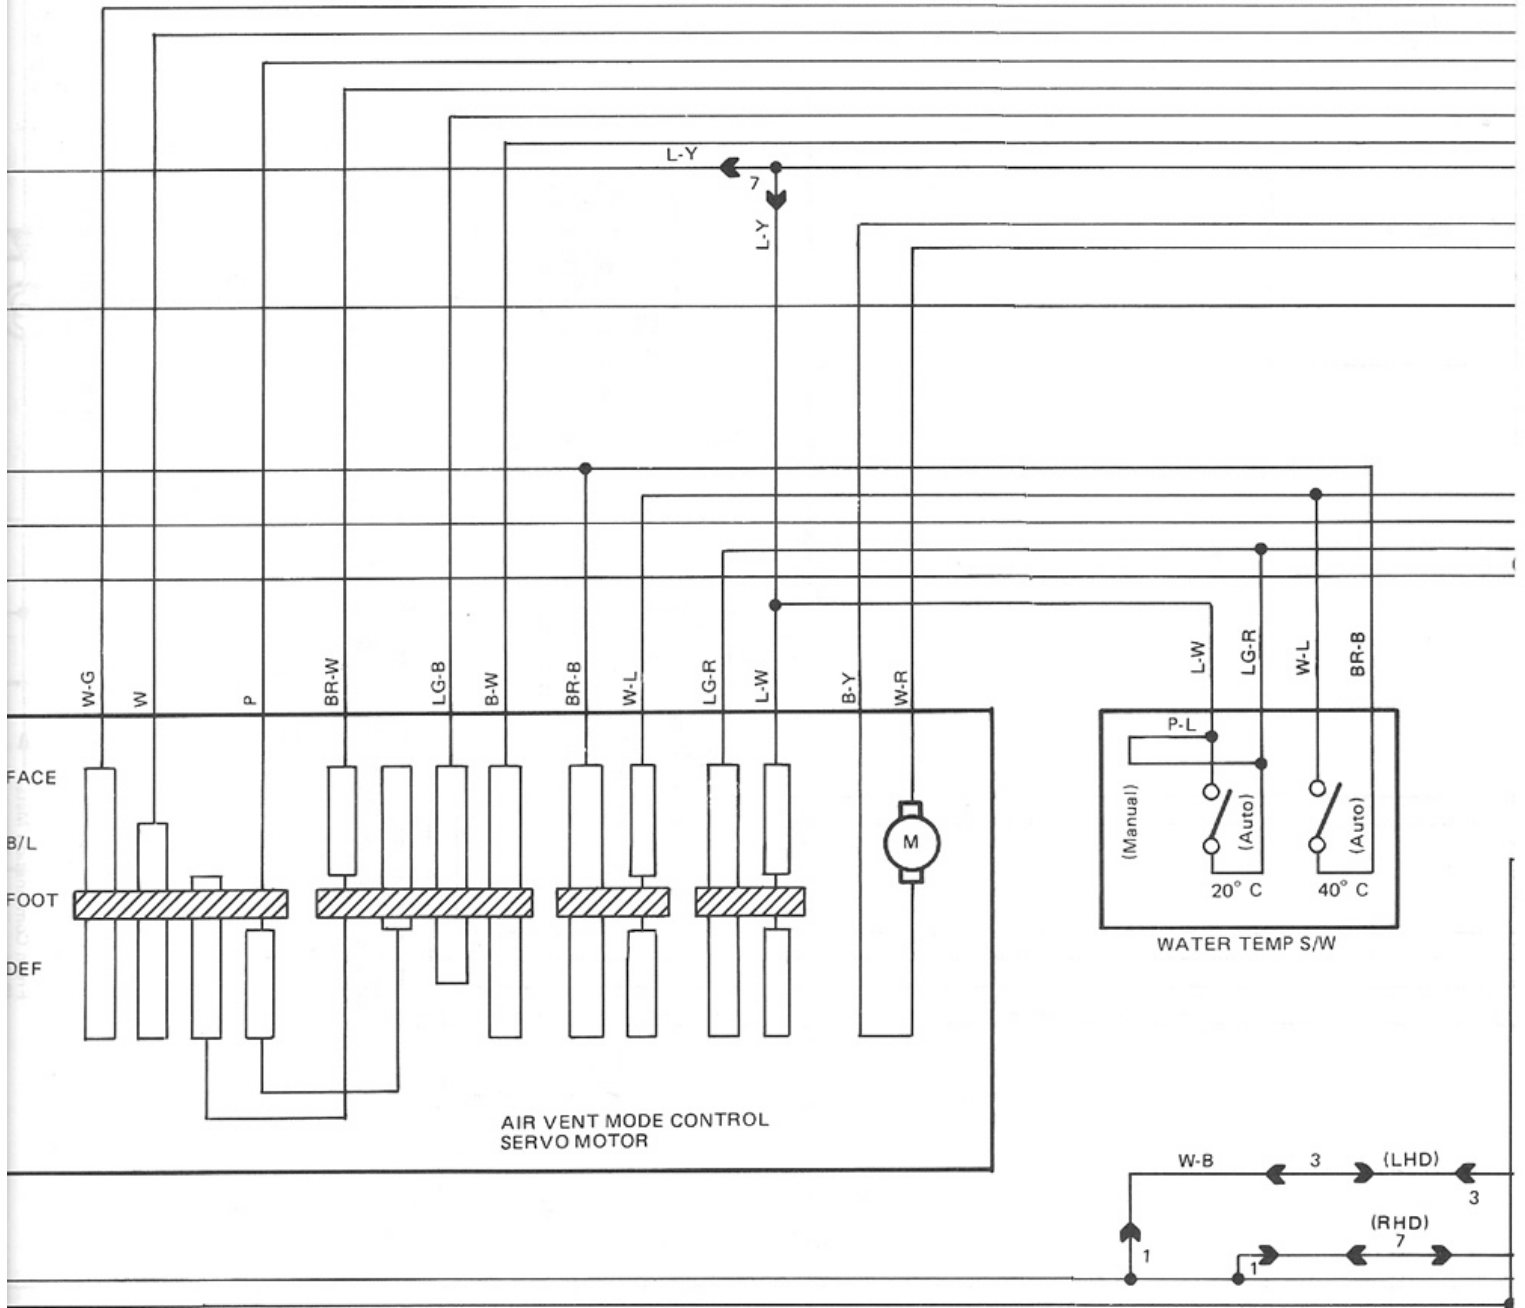


nder right front pillar (LHD)  
nder left front pillar (RHD)




Air Conditioner, Cooler and Heater

4

5

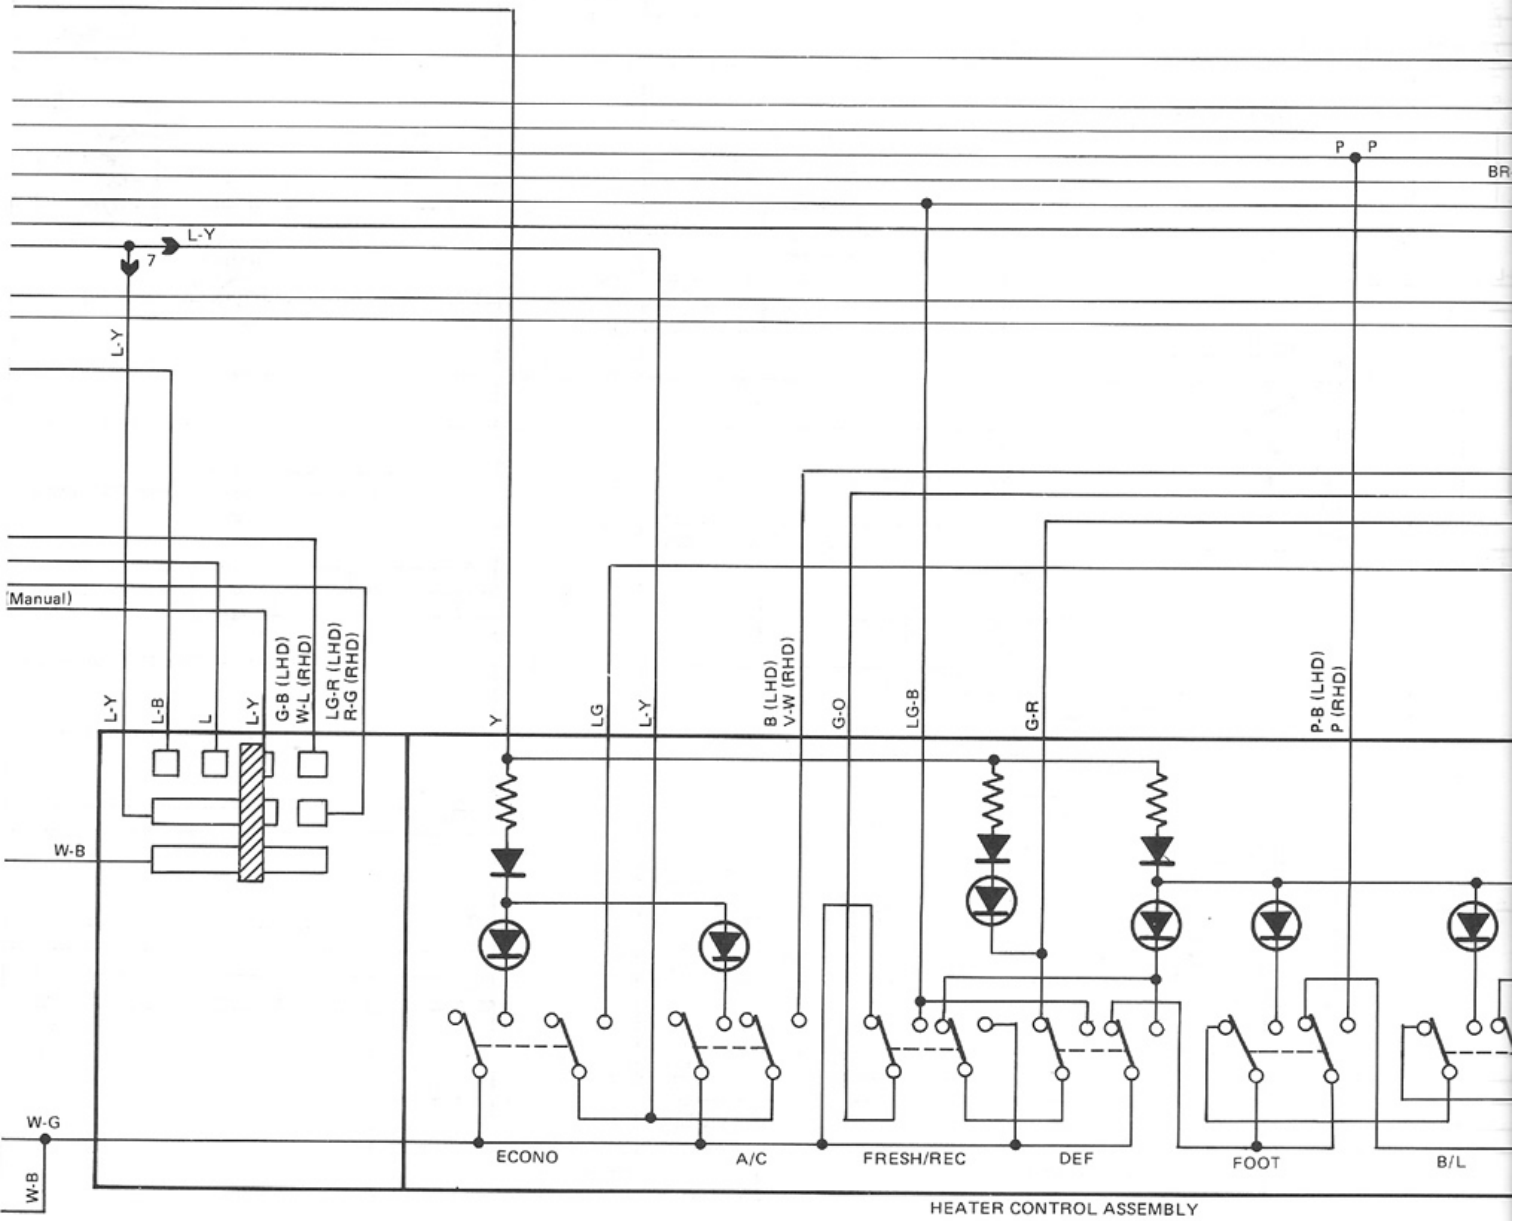

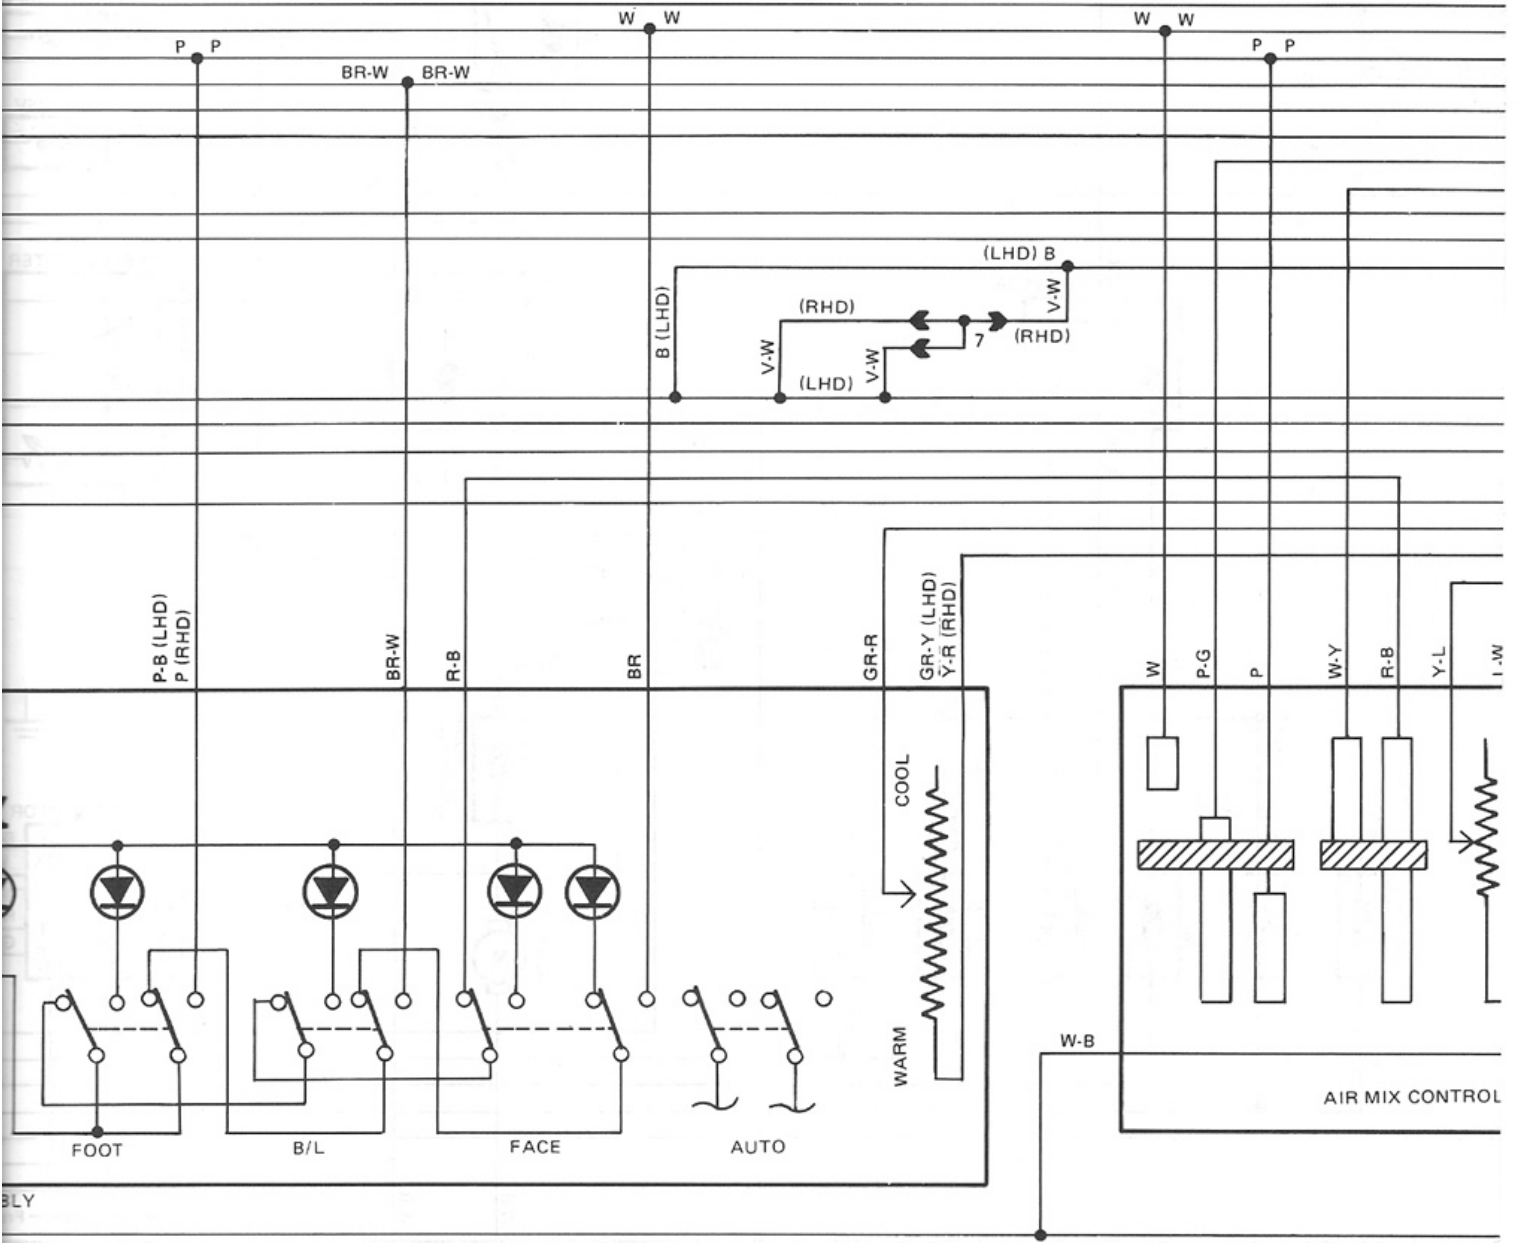


7

8

A  
B

D  
E  
F  
G

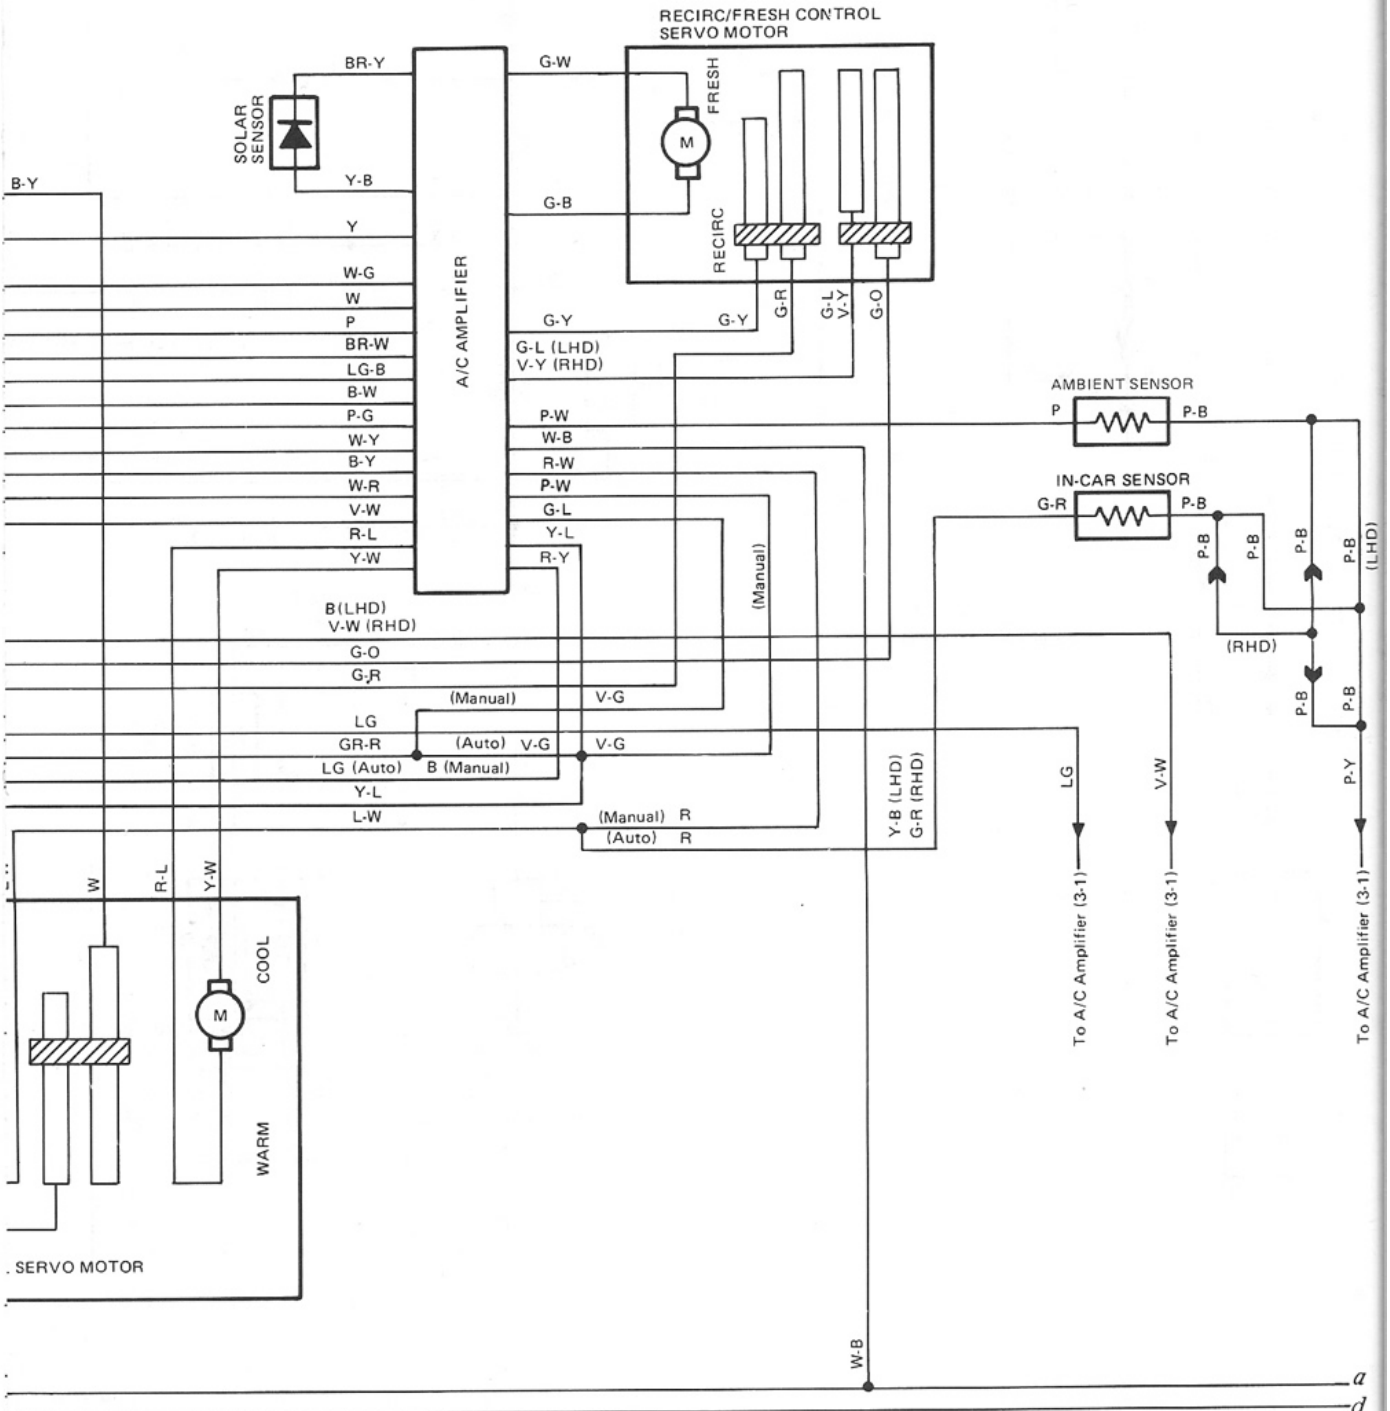

a  
d


(transmission)



Back-up Lights

8

A  
B  
D  
E  
F  
G

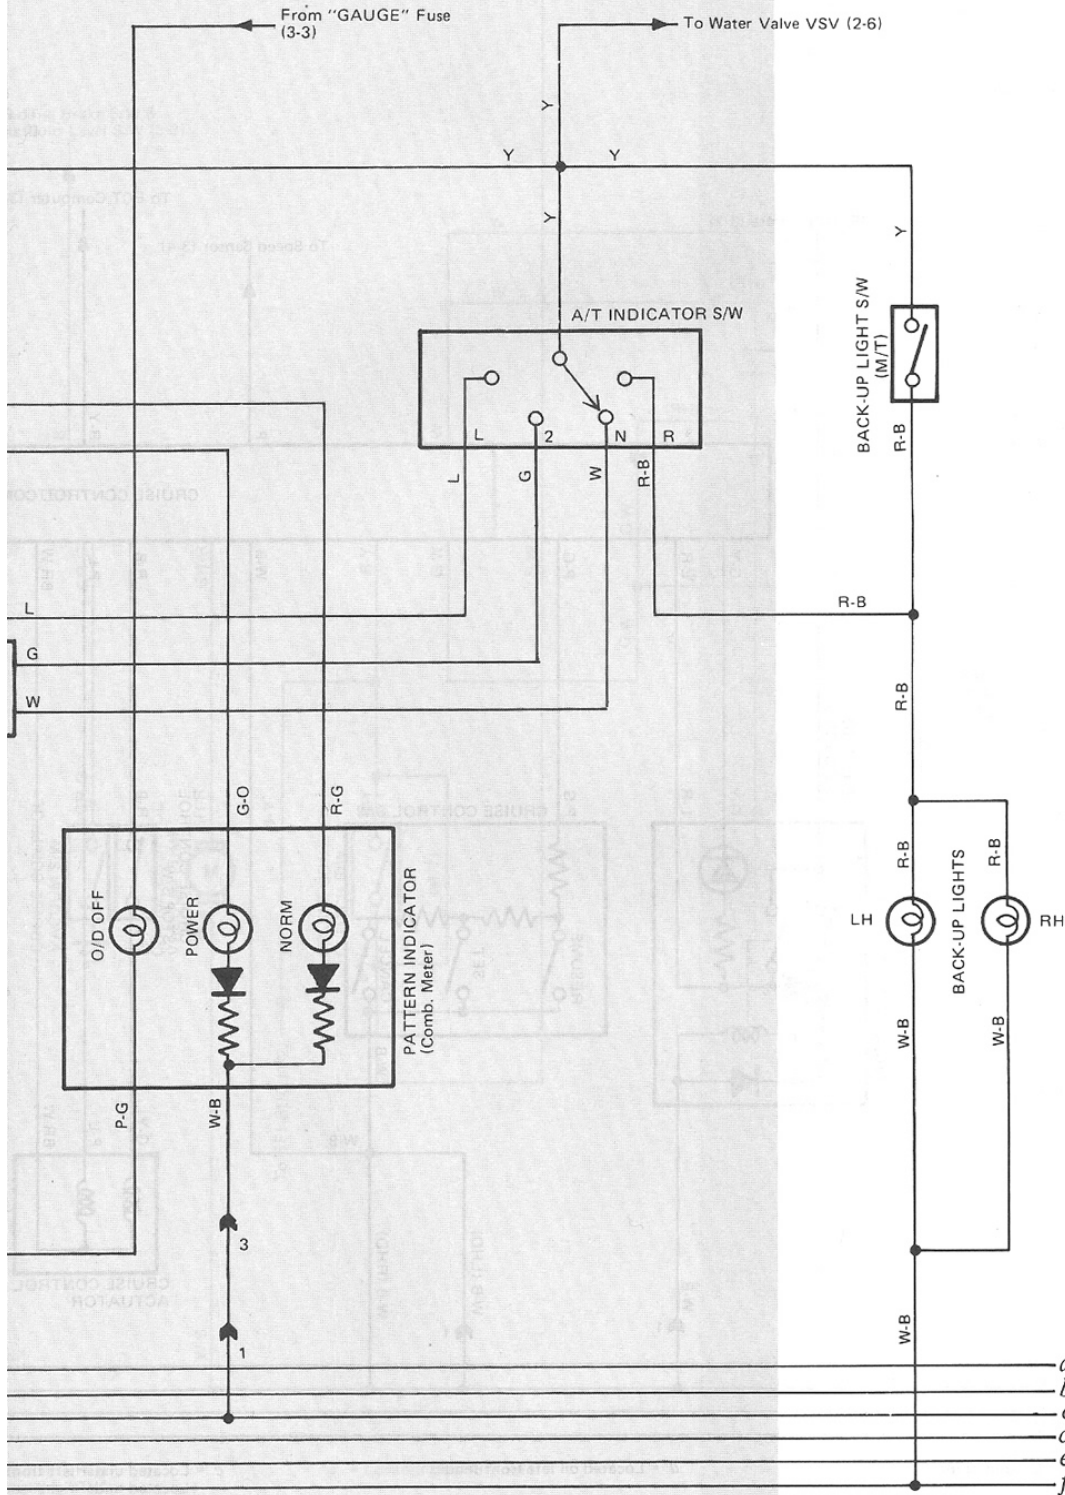






Cruise Control



Stop Lights

2


3

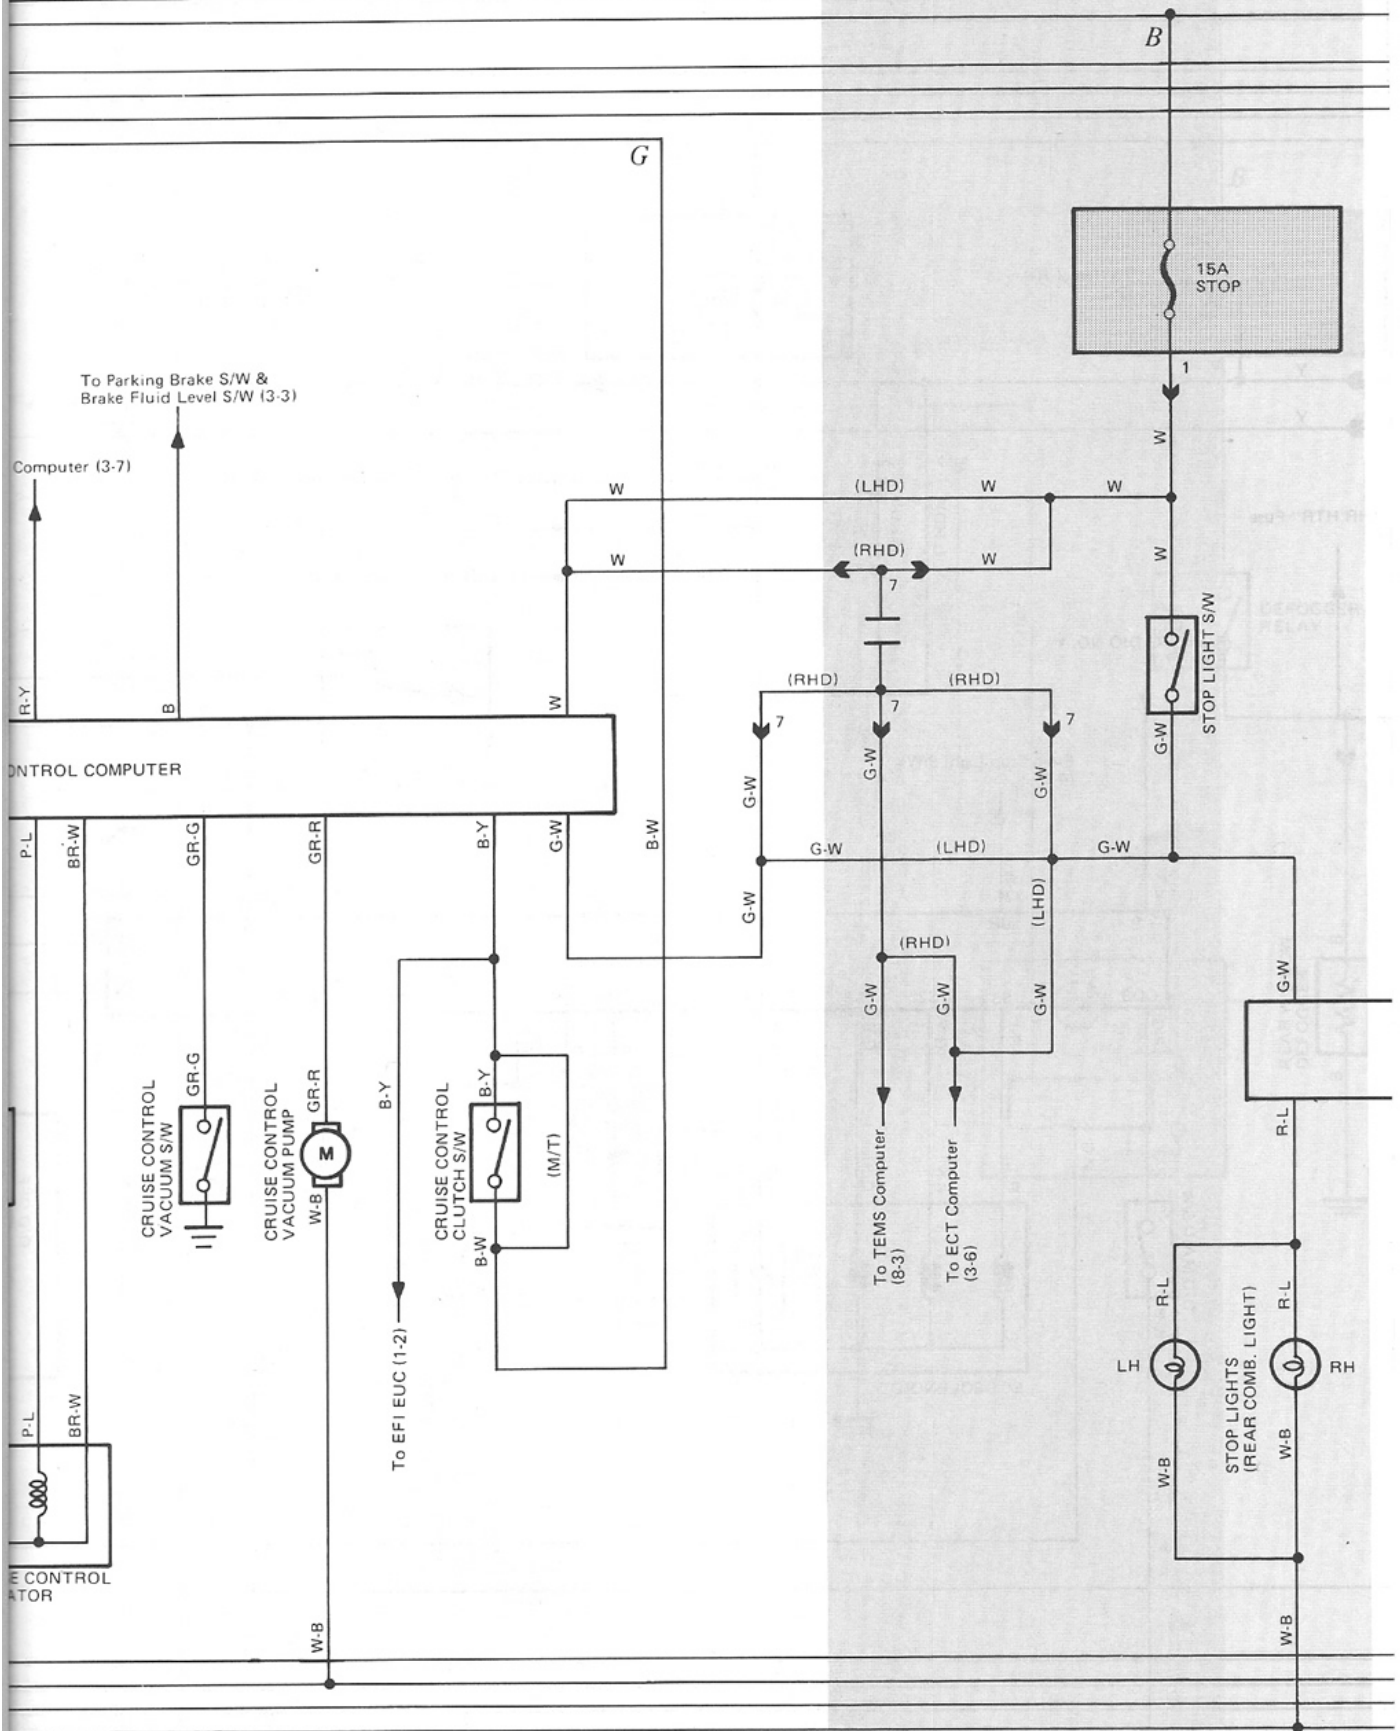

under left front pillar (LHD)  
under right front pillar (RHD)

e = Located Behind Radio

f = Located on center of back panel

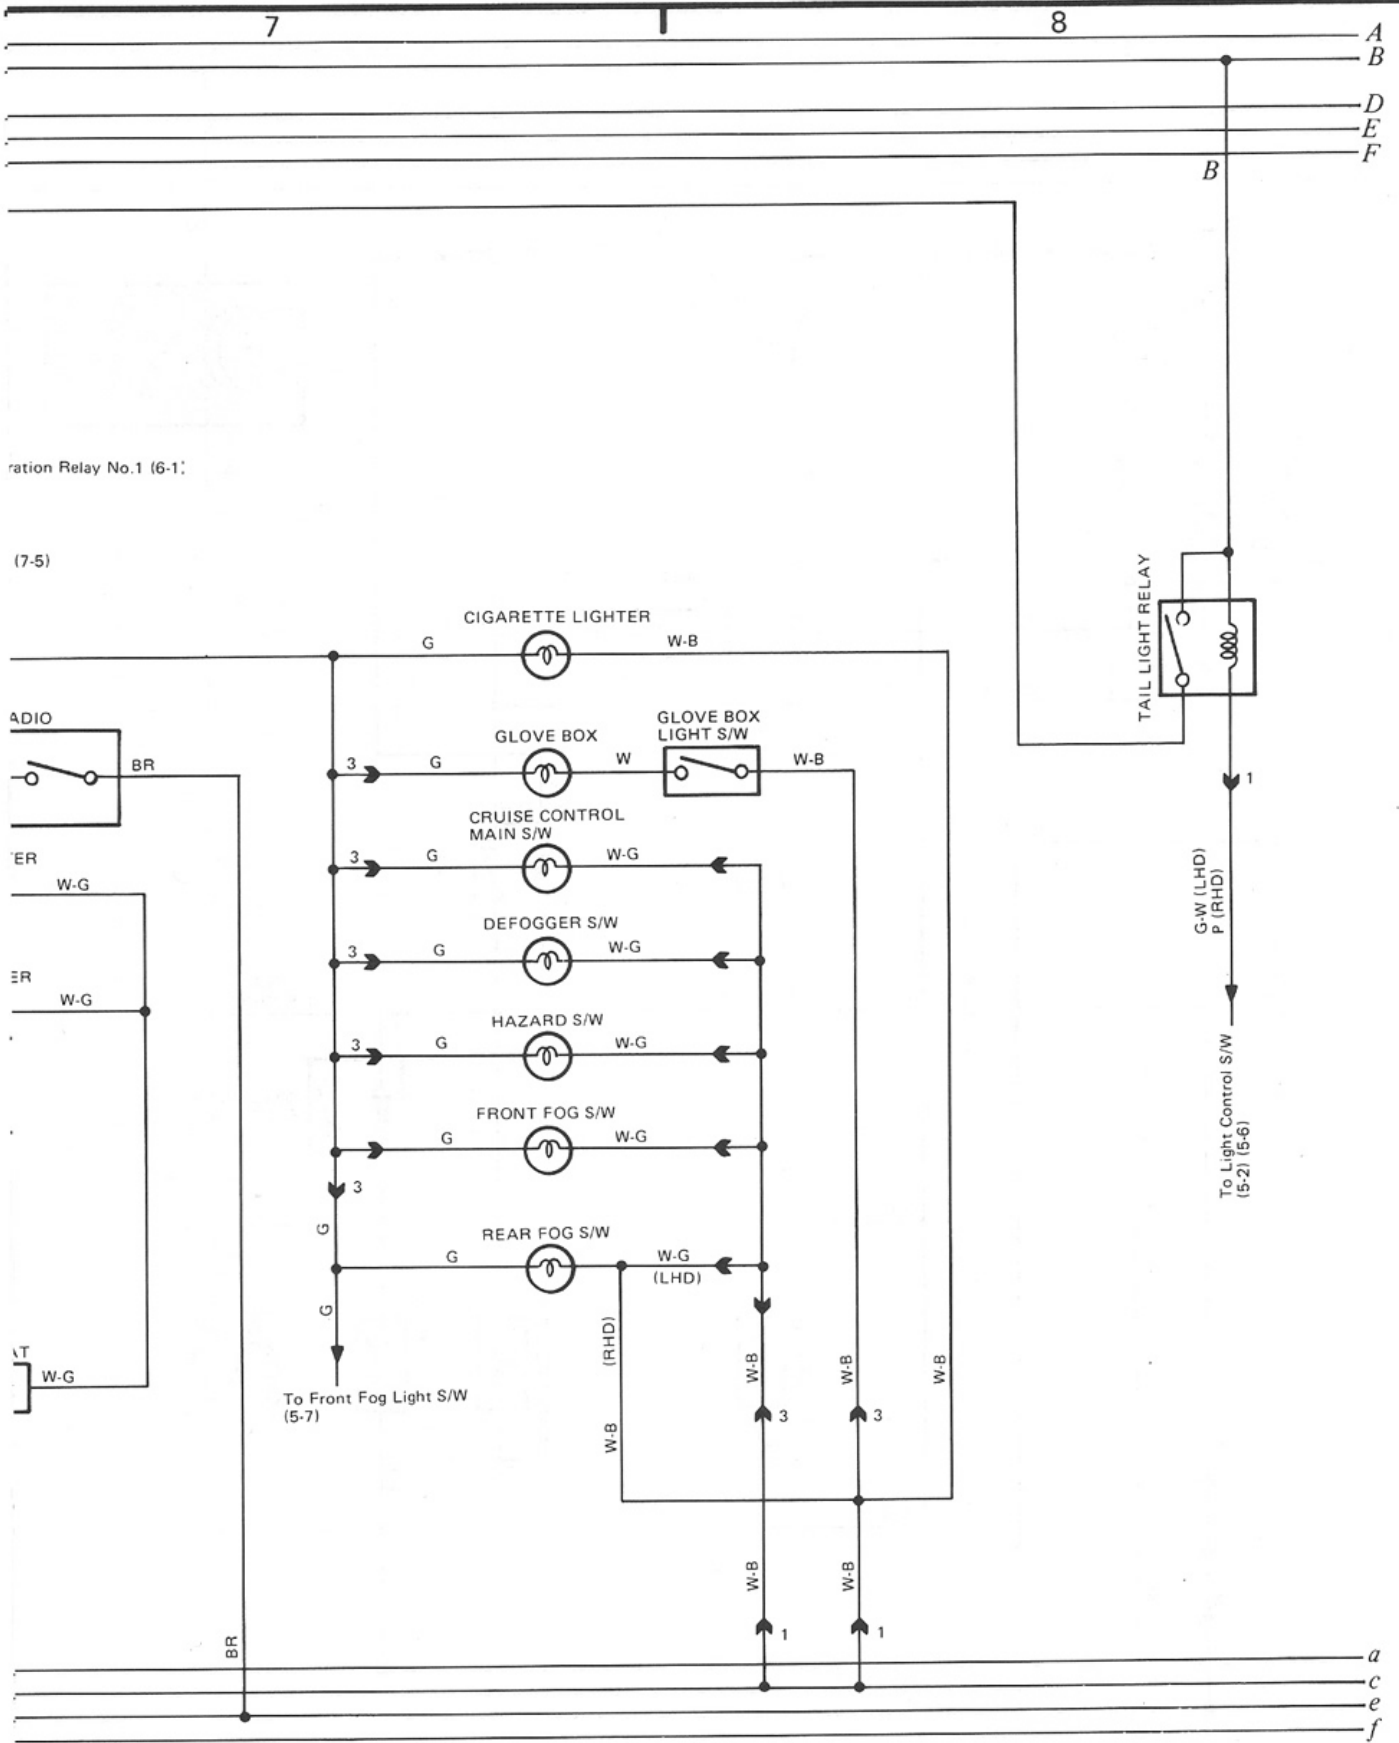


ration Relay No.1 (6-1)

(7-5)



# TOYOTA SUPRA (Cont'd)



## Air Conditioner, Cooler and Heater

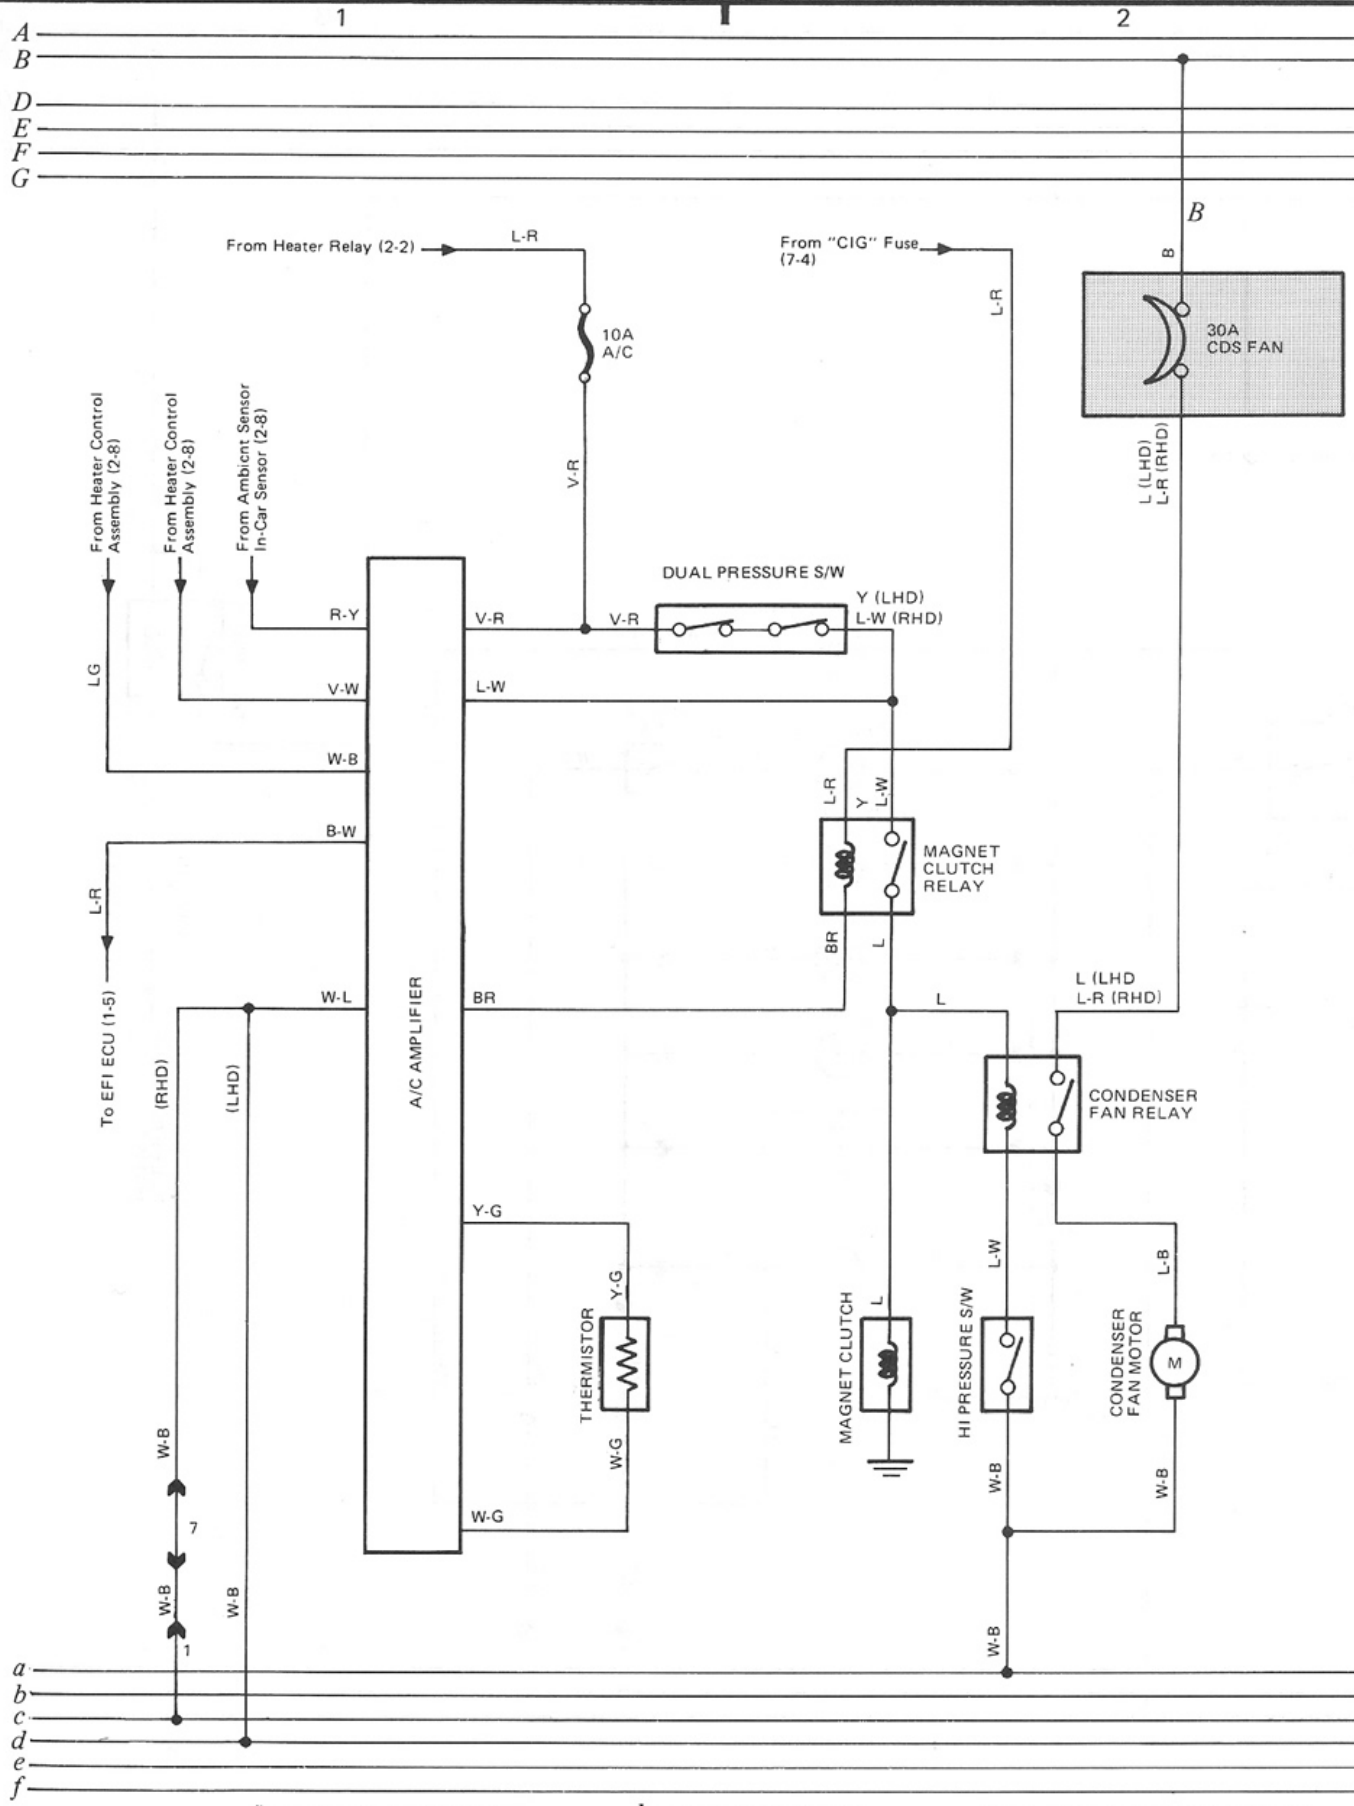

 Ground points      a = Located on left front fender      b = Located on engine block      c = Located under left front pillar (LHD)  
 Located under right front pillar (RHD)

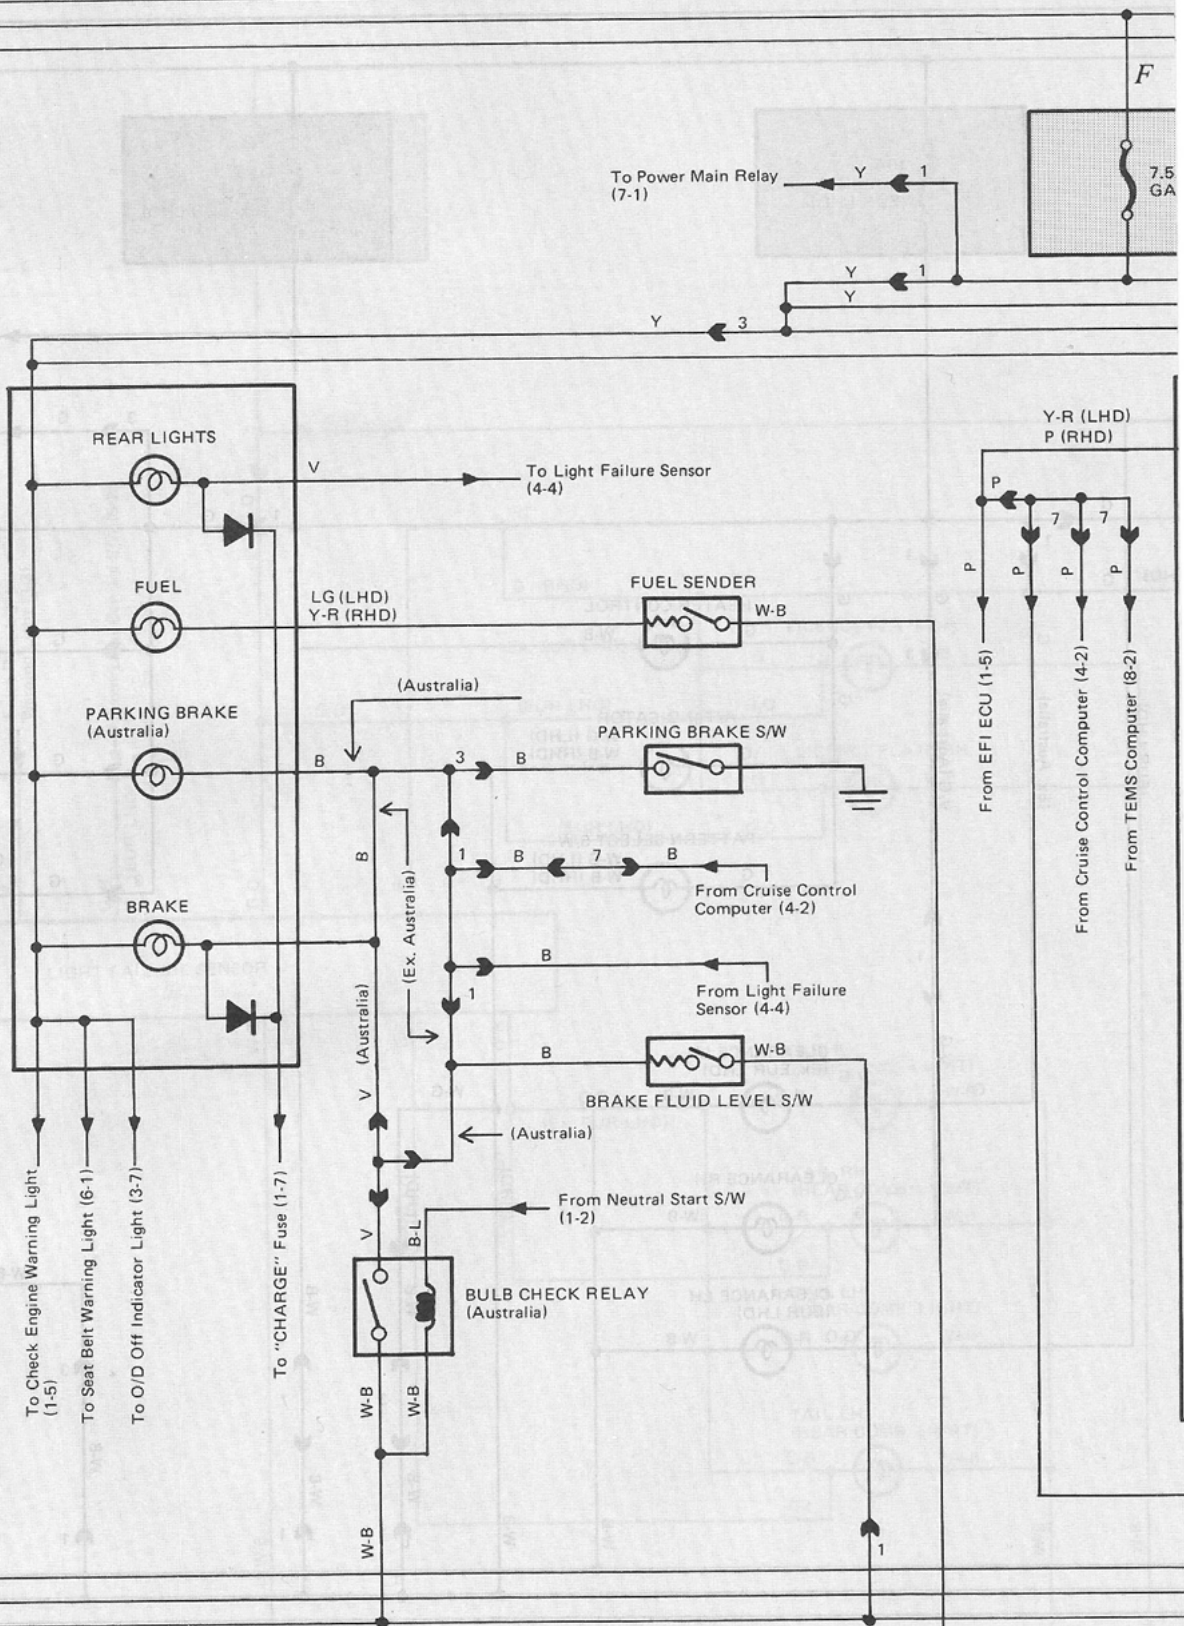

d = Located under right front pillar (LHD)  
Located under left front pillar (RHD)

e = Located behind radio

f = Located on center of back panel

tion Meter





4

5



Rear Window De

A  
UGE

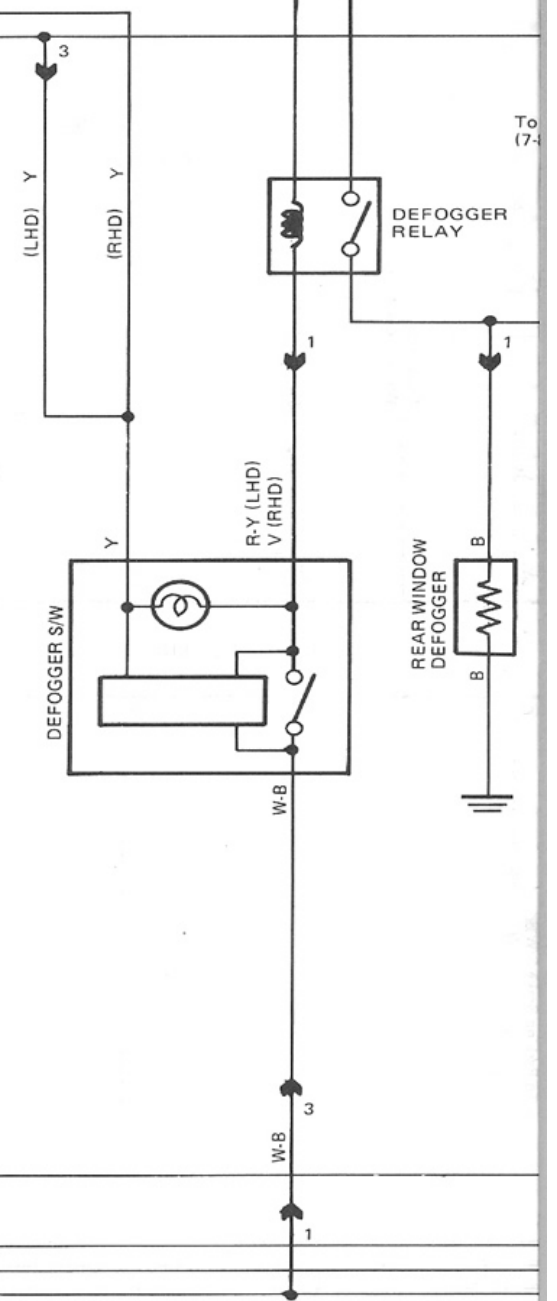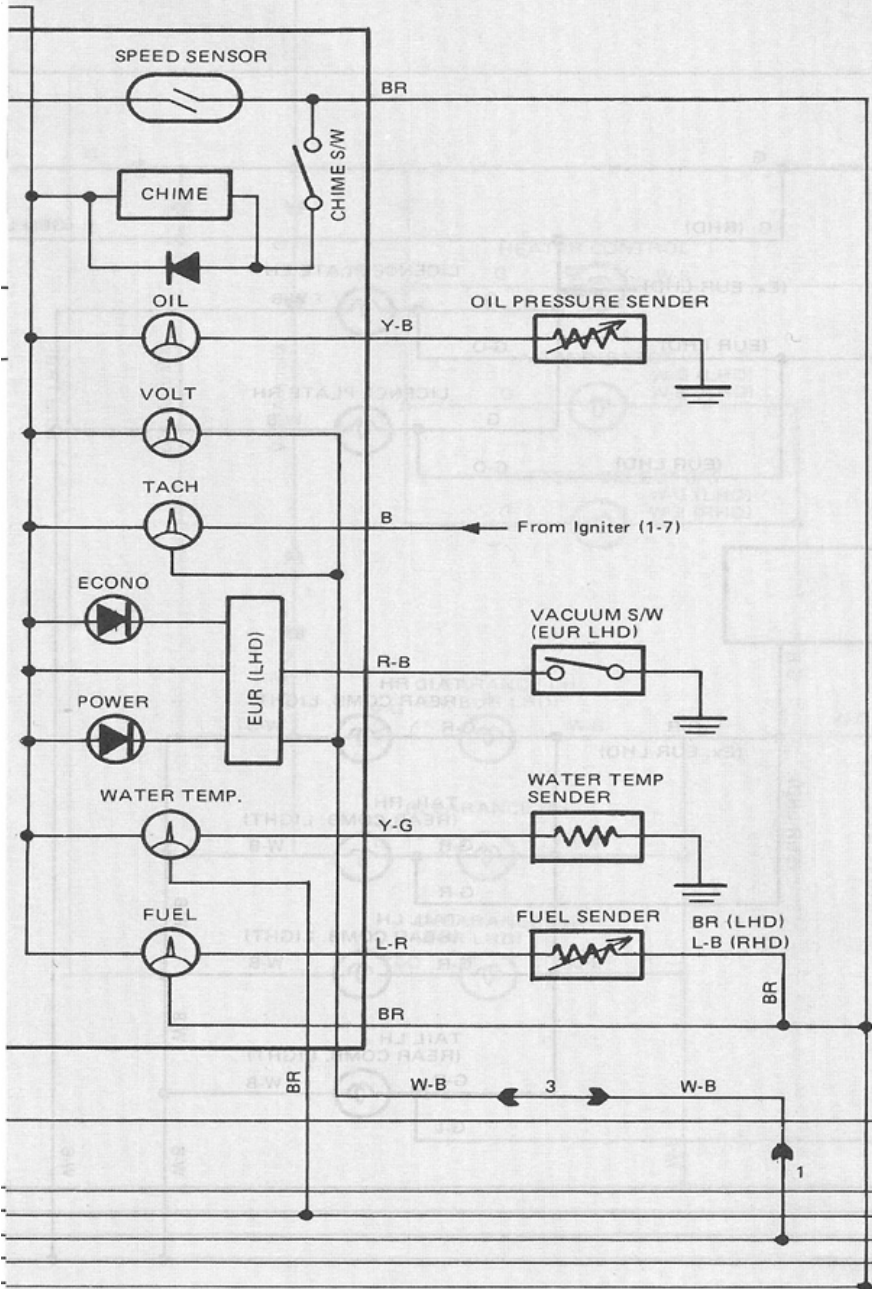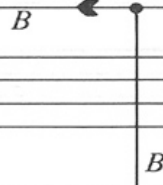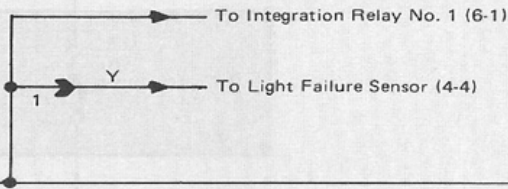





fogger


6

 7

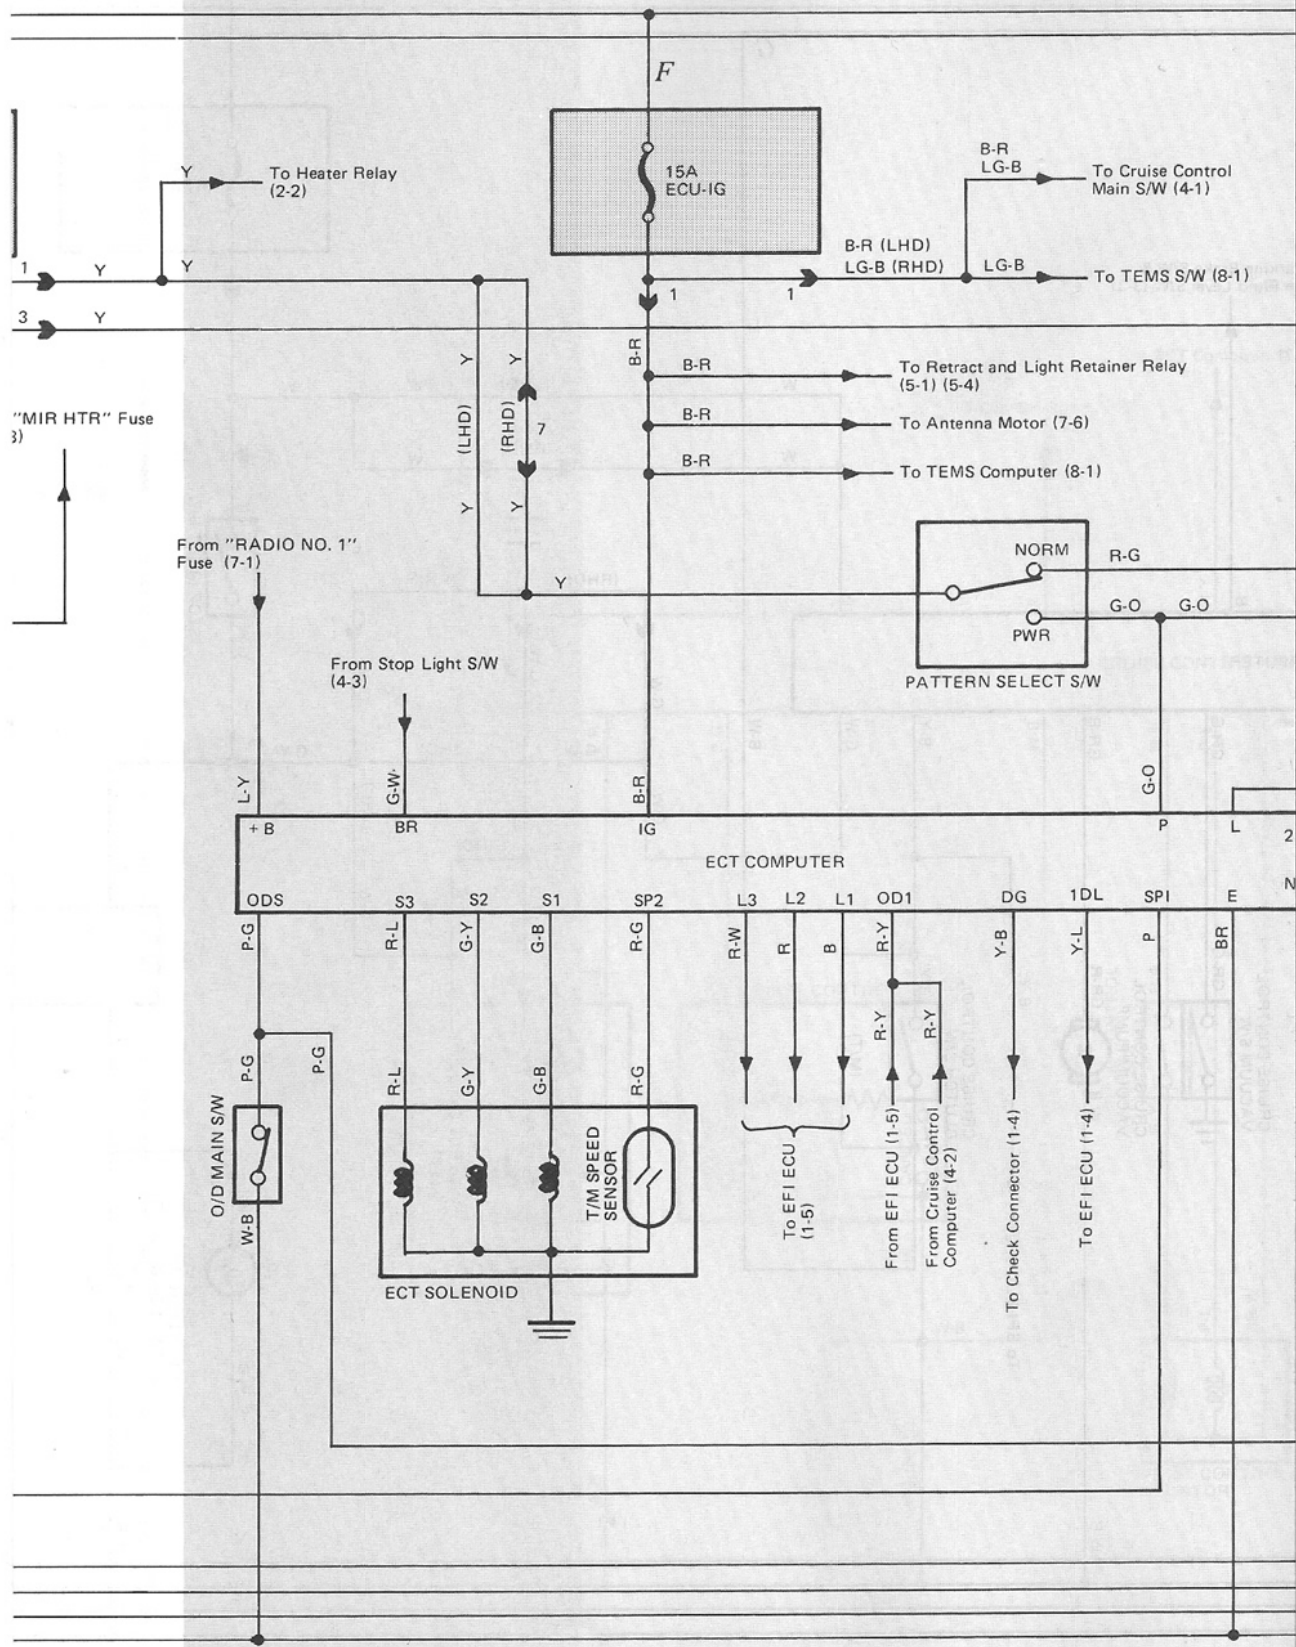



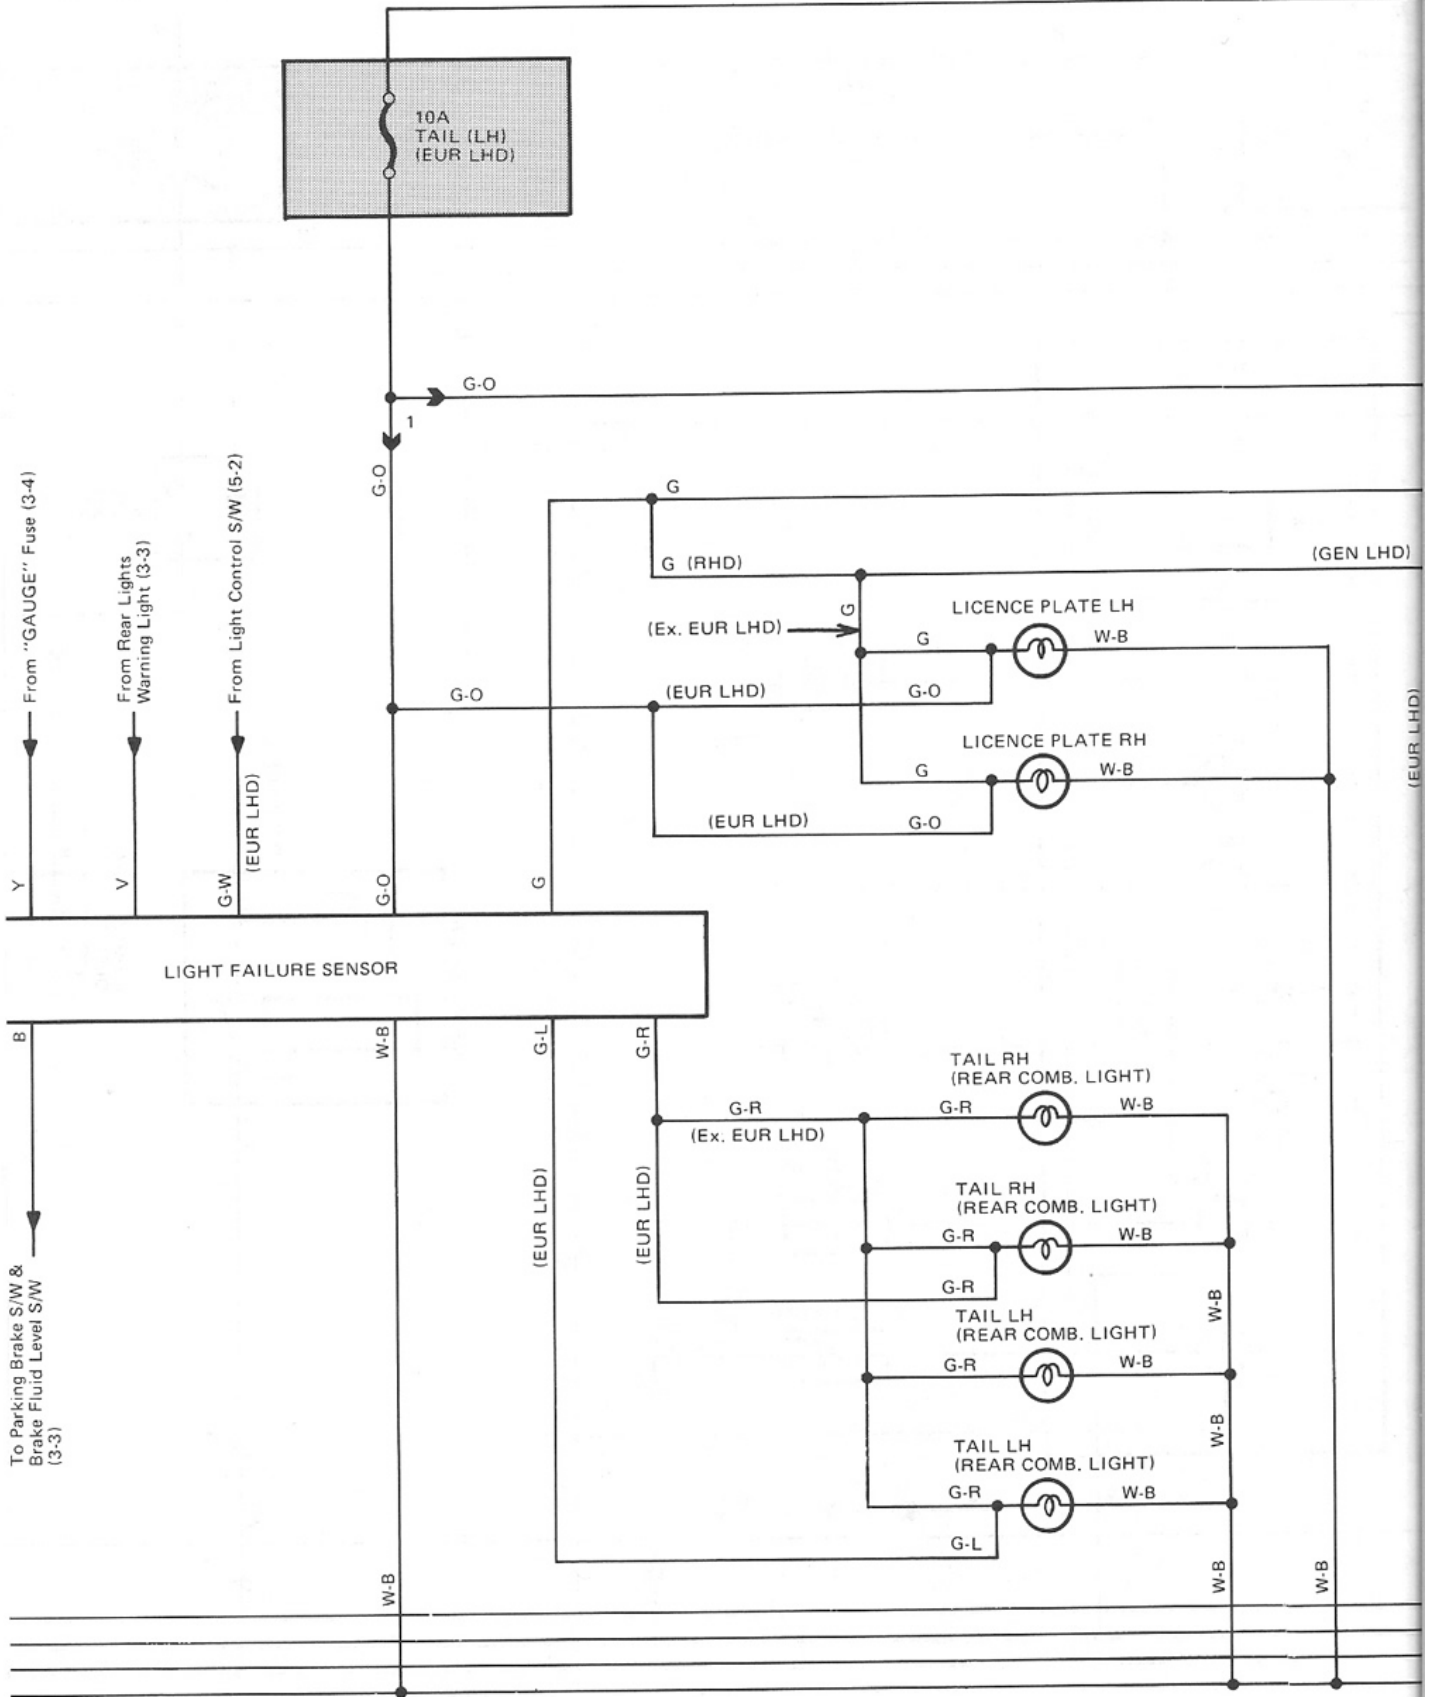




# Taillights and Illumination

5


6

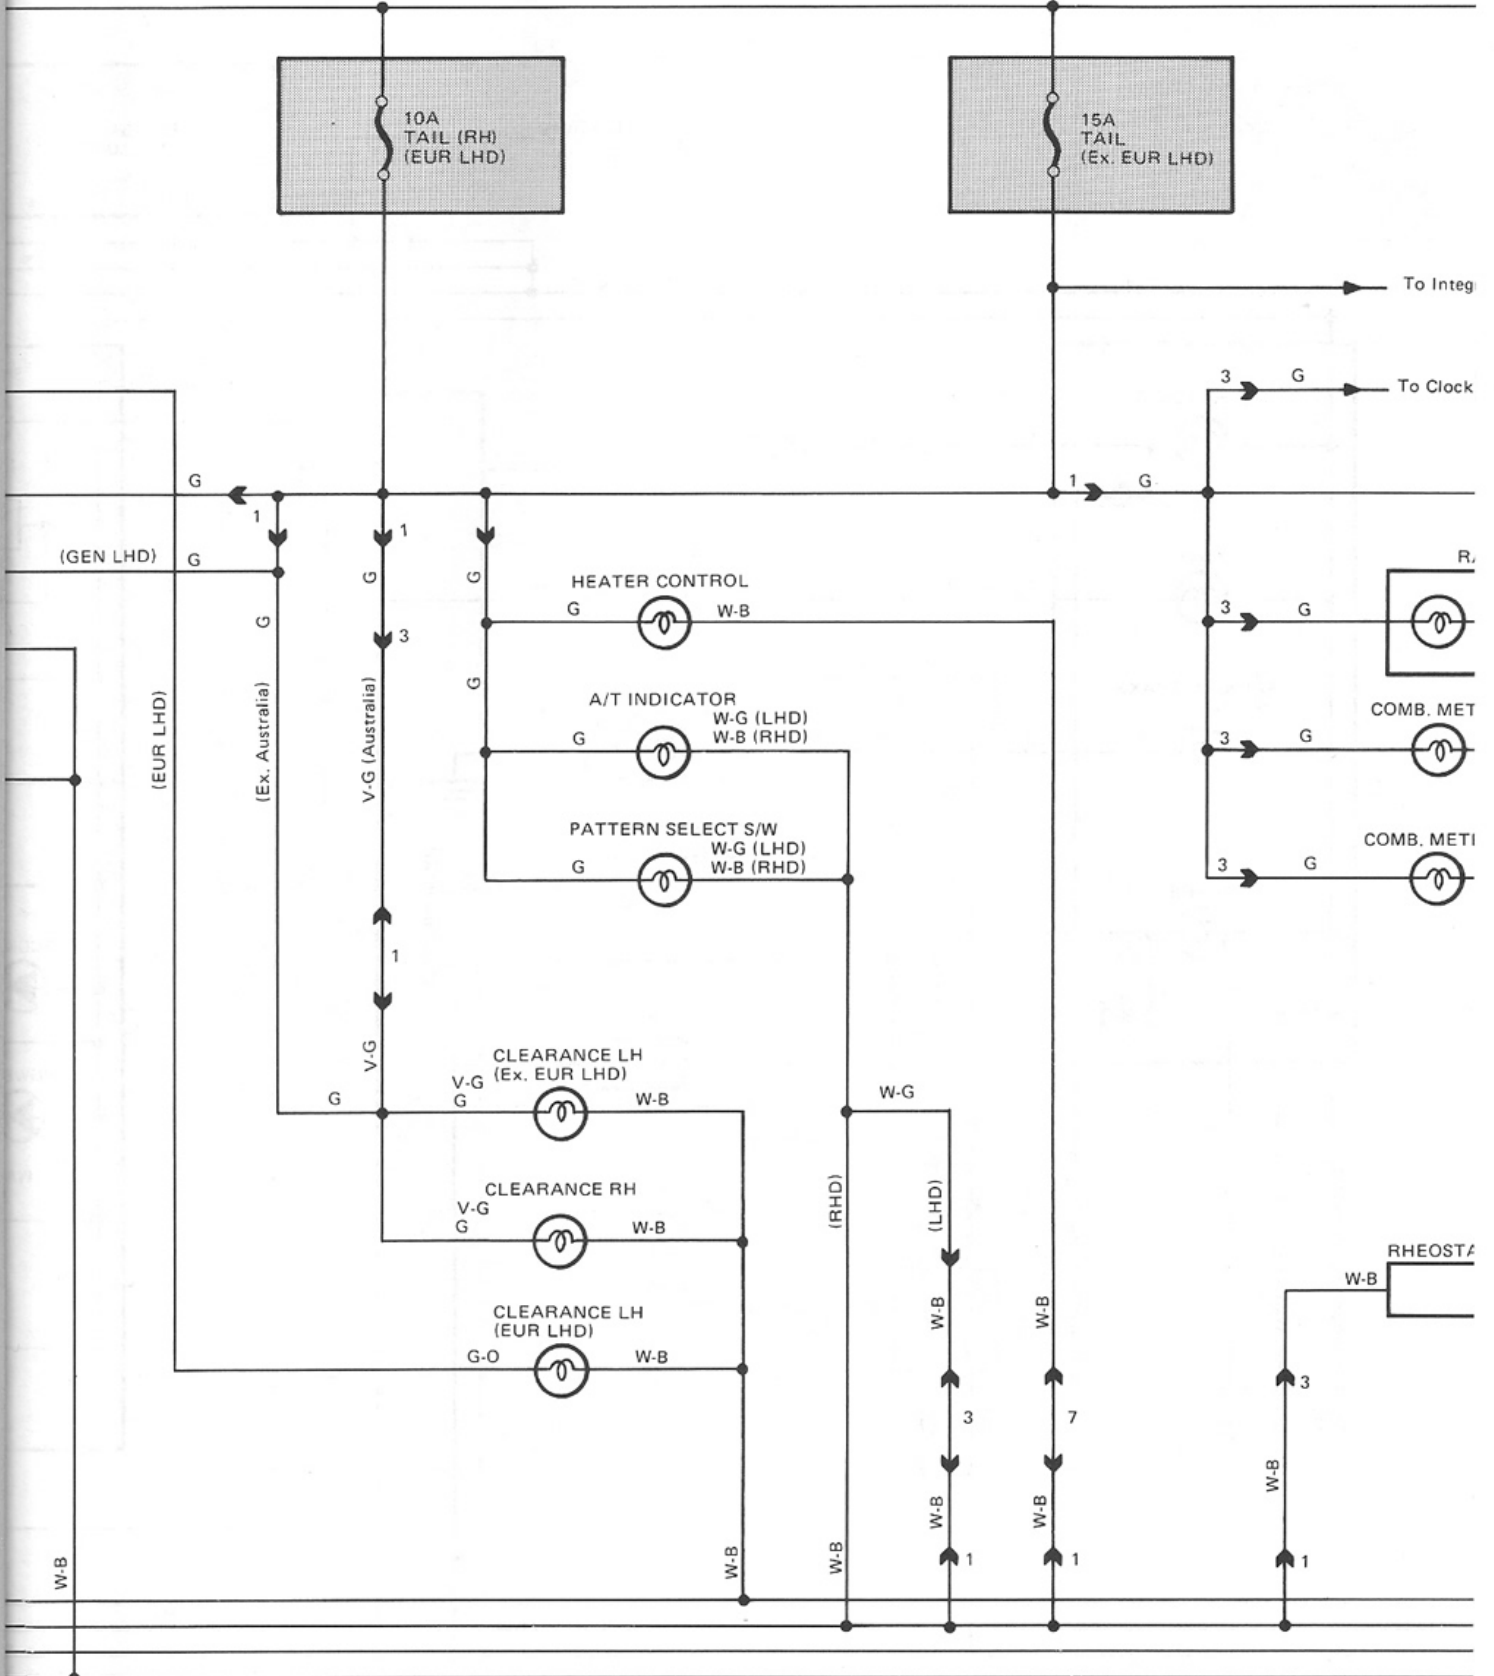

# TOYOTA SUPRA (Cont'd)




Headlights

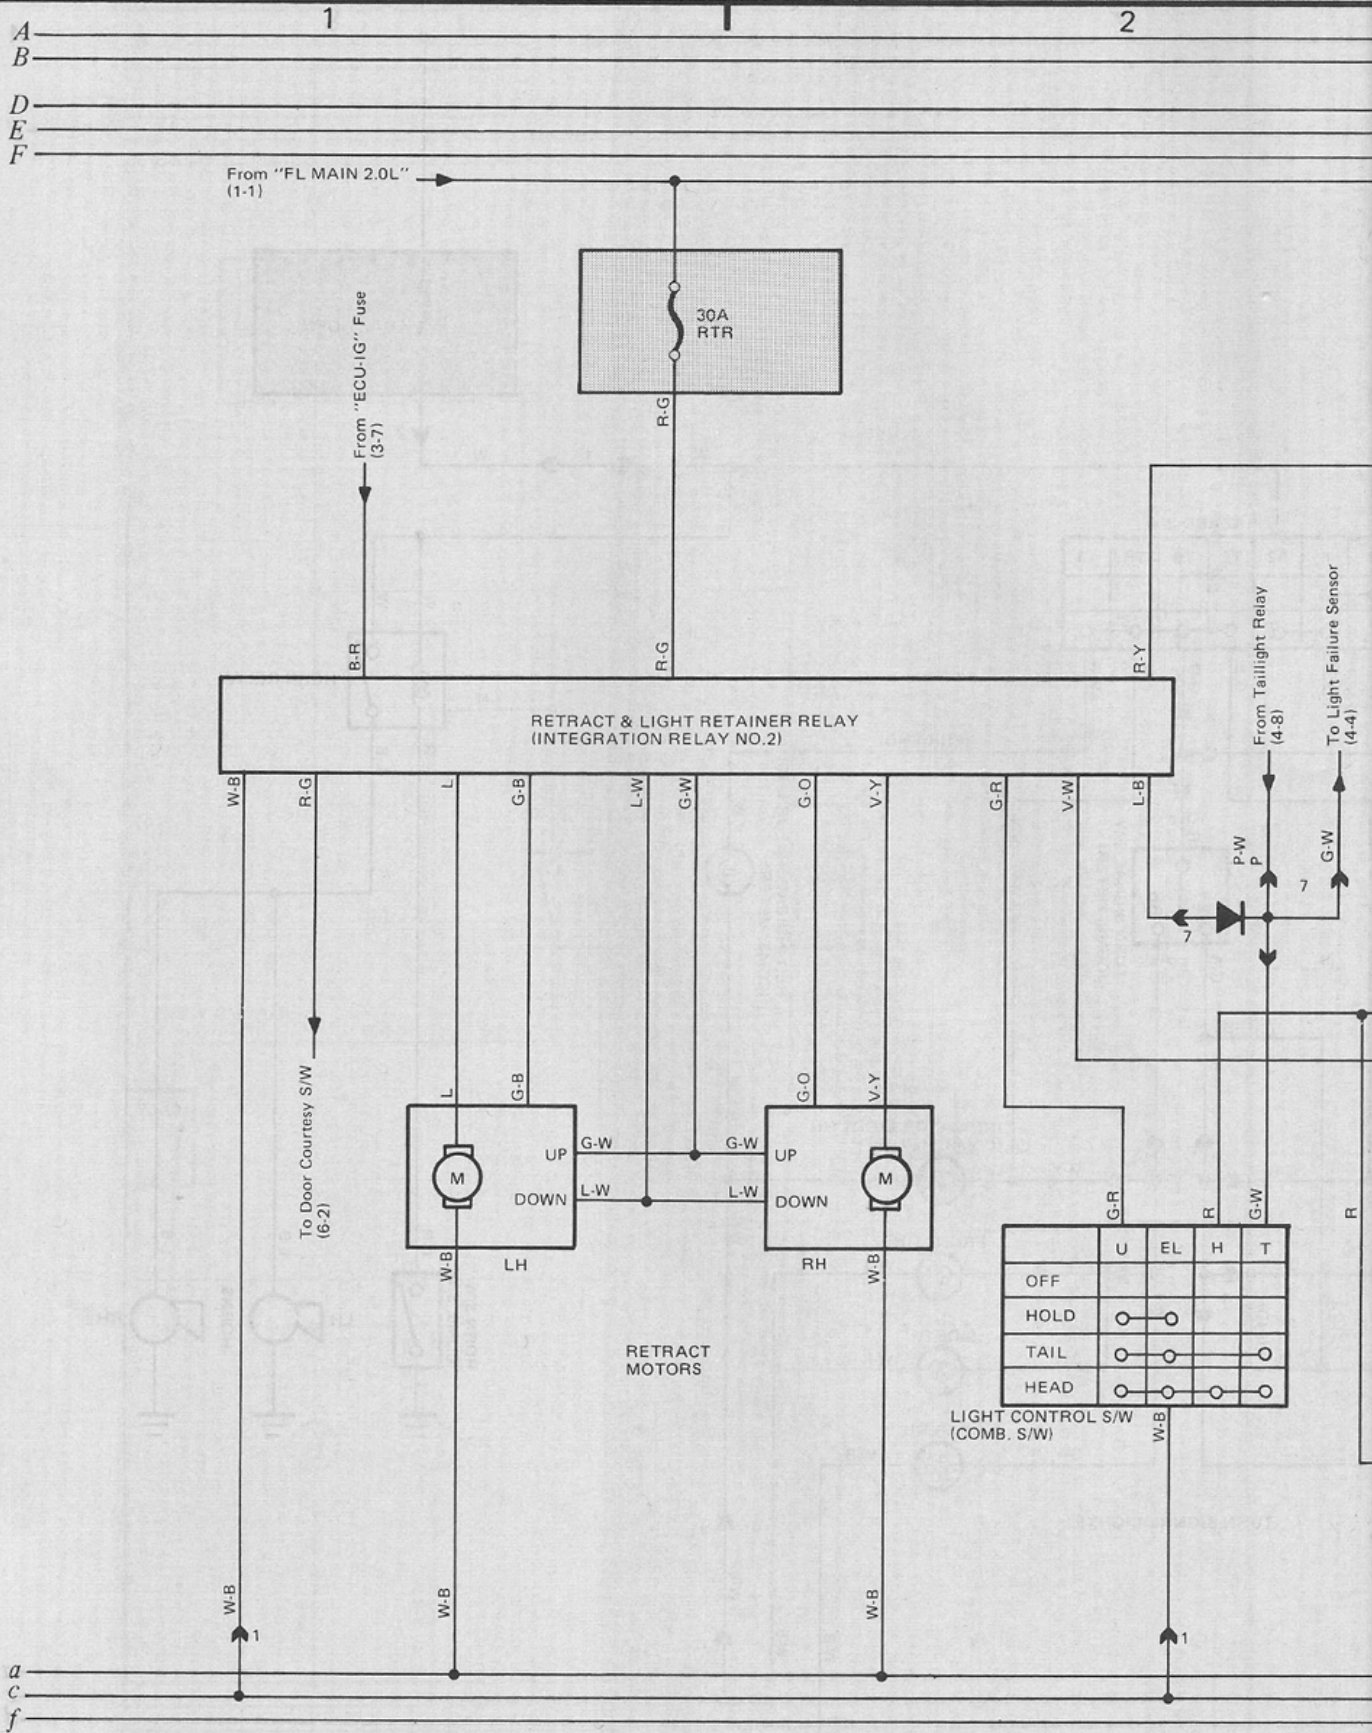

Ground points      a = Located on left front fender      c = Located under left front pillar (LHD) Located under right front pillar (RHD)      f = L

(EUR LHD)

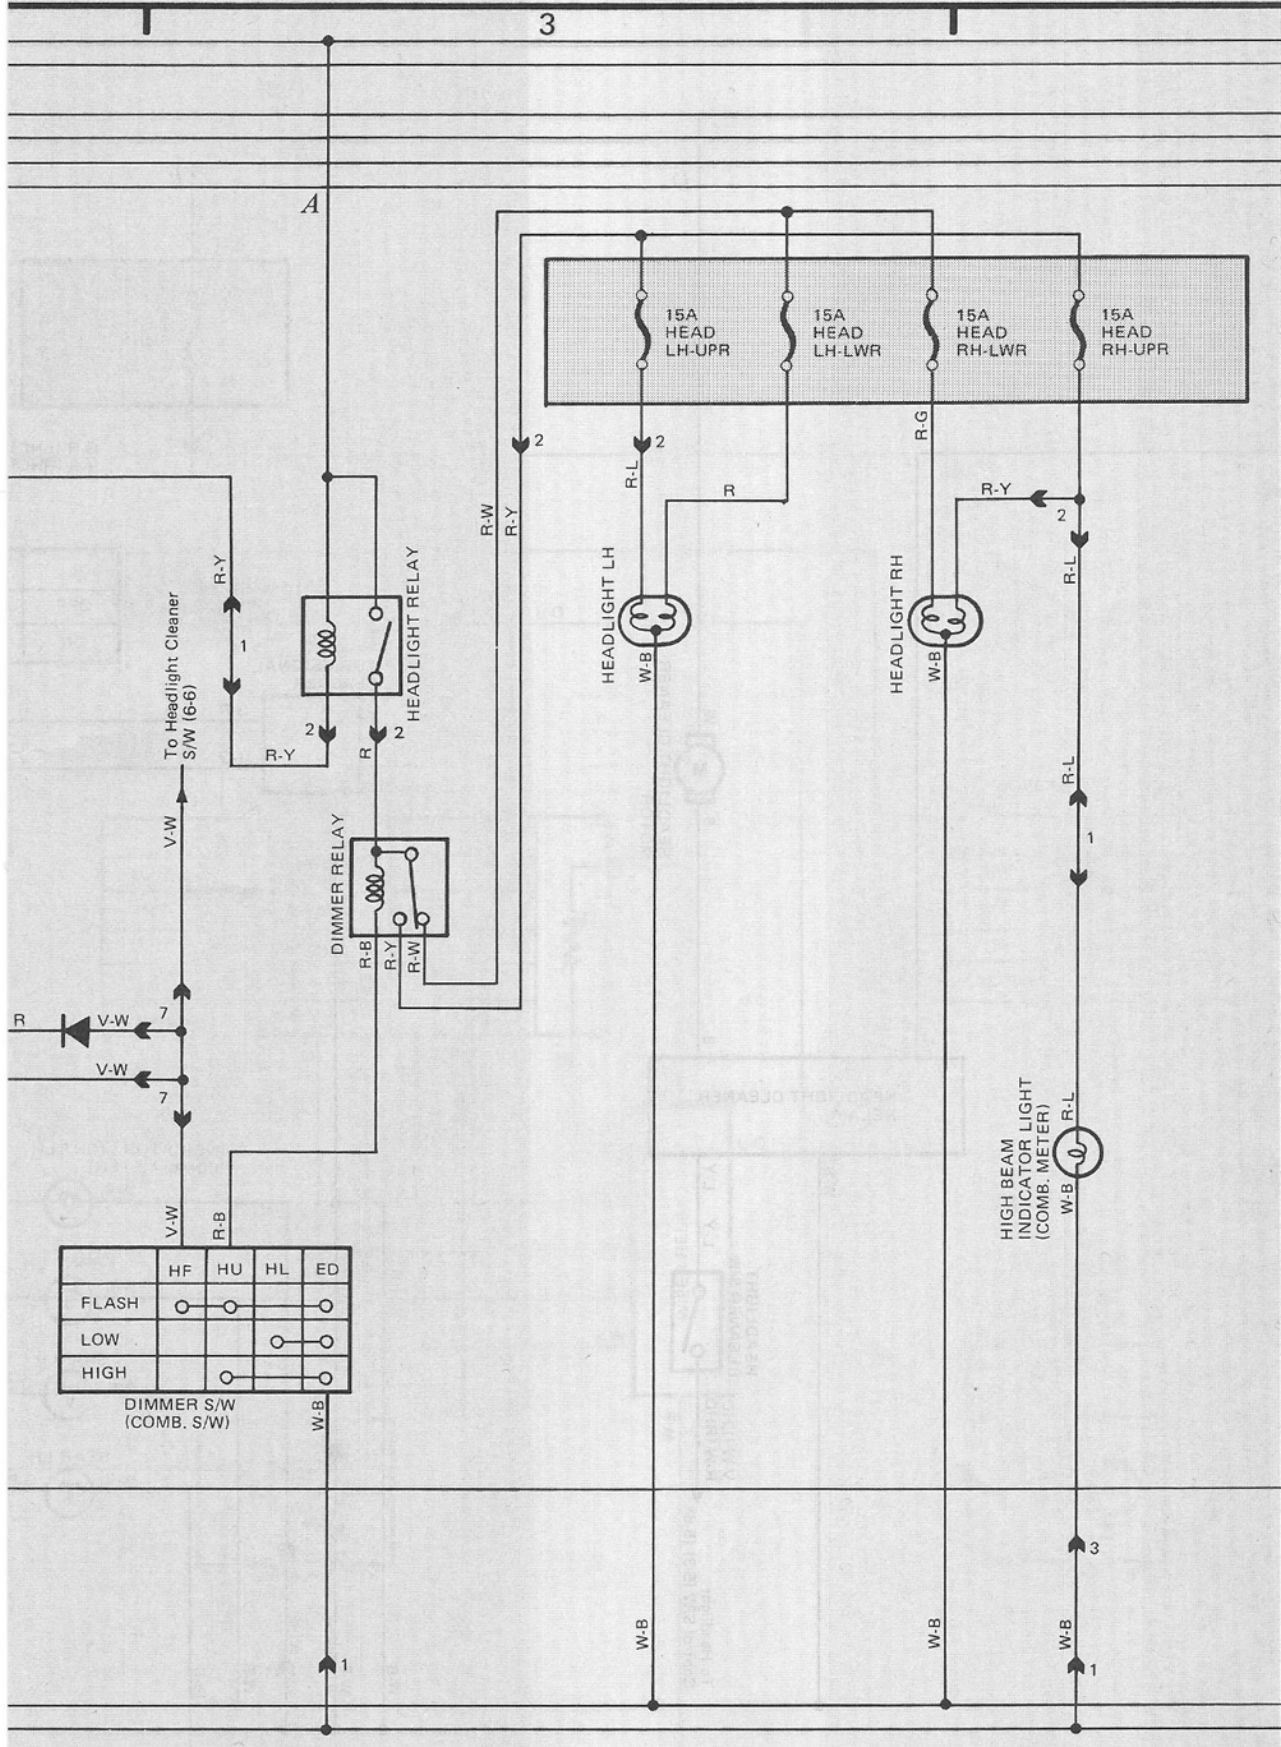

	HF	HU	HL	ED
FLASH	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
LOW	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
HIGH	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>

DIMMER S/W  
(COMB. S/W)

 



A  
B  
D  
E  
F


4

5


From "ECU-IG" Fuse  
(3-7)  
B-R

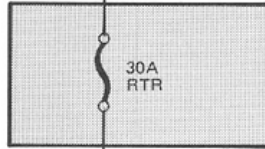

To Door Courtesy S/W  
(6-2)  
R-G

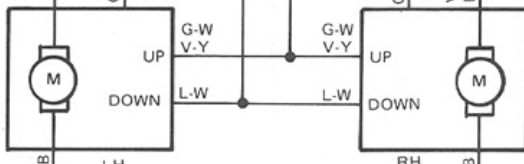

RETRACT MOTOR

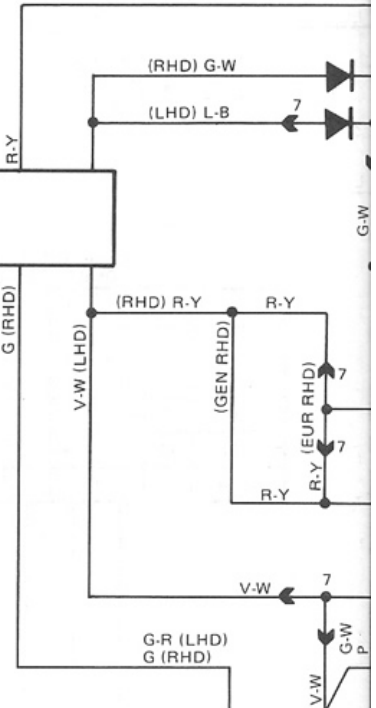

	U	EL	H	T
OFF				
HOLD	○	○		
TAIL	○	○	○	
HEAD	○	○	○	○


LIGHT CONTROL S/W  
(COMB. S/W)

a  
c  
f

Ground point





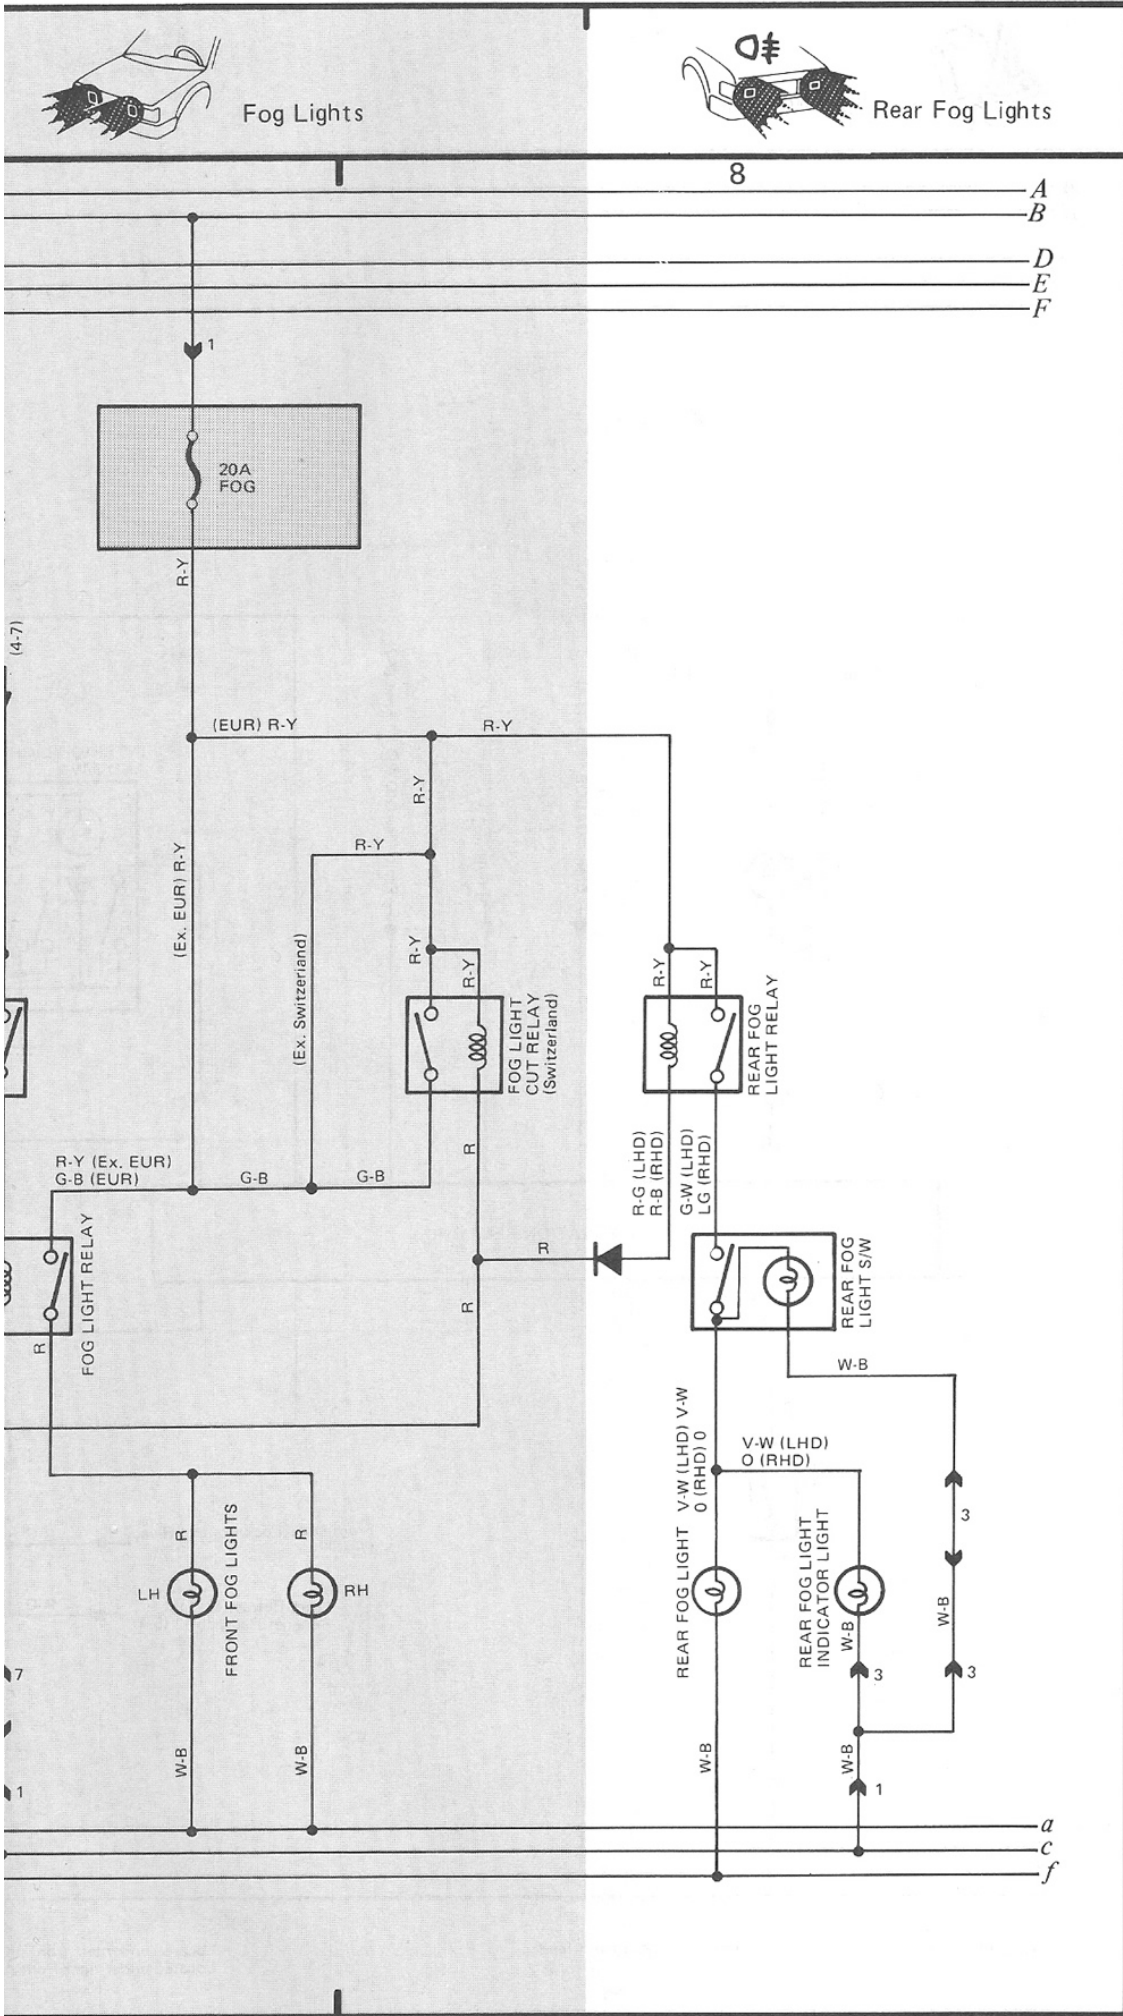




# 6 TOYOTA SUPRA (Cont'd)



## Seat Belt Warning


A  
B  
D  
E  
F

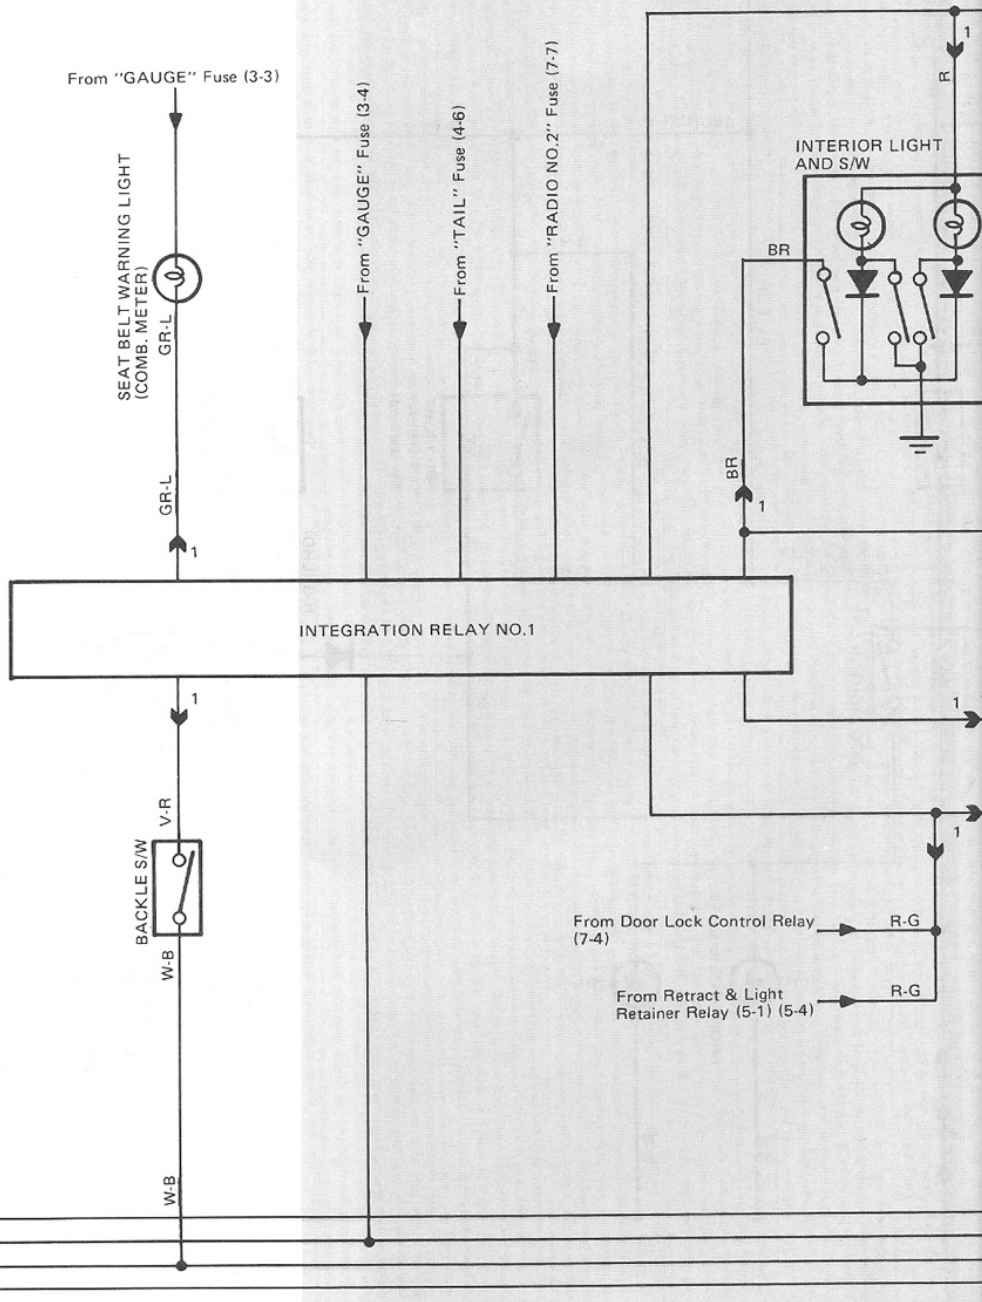


Ground points

a = Located on left front fender

 c = Located under left front pillar (L)  
Located under right front pillar (R)




# Interior Lights

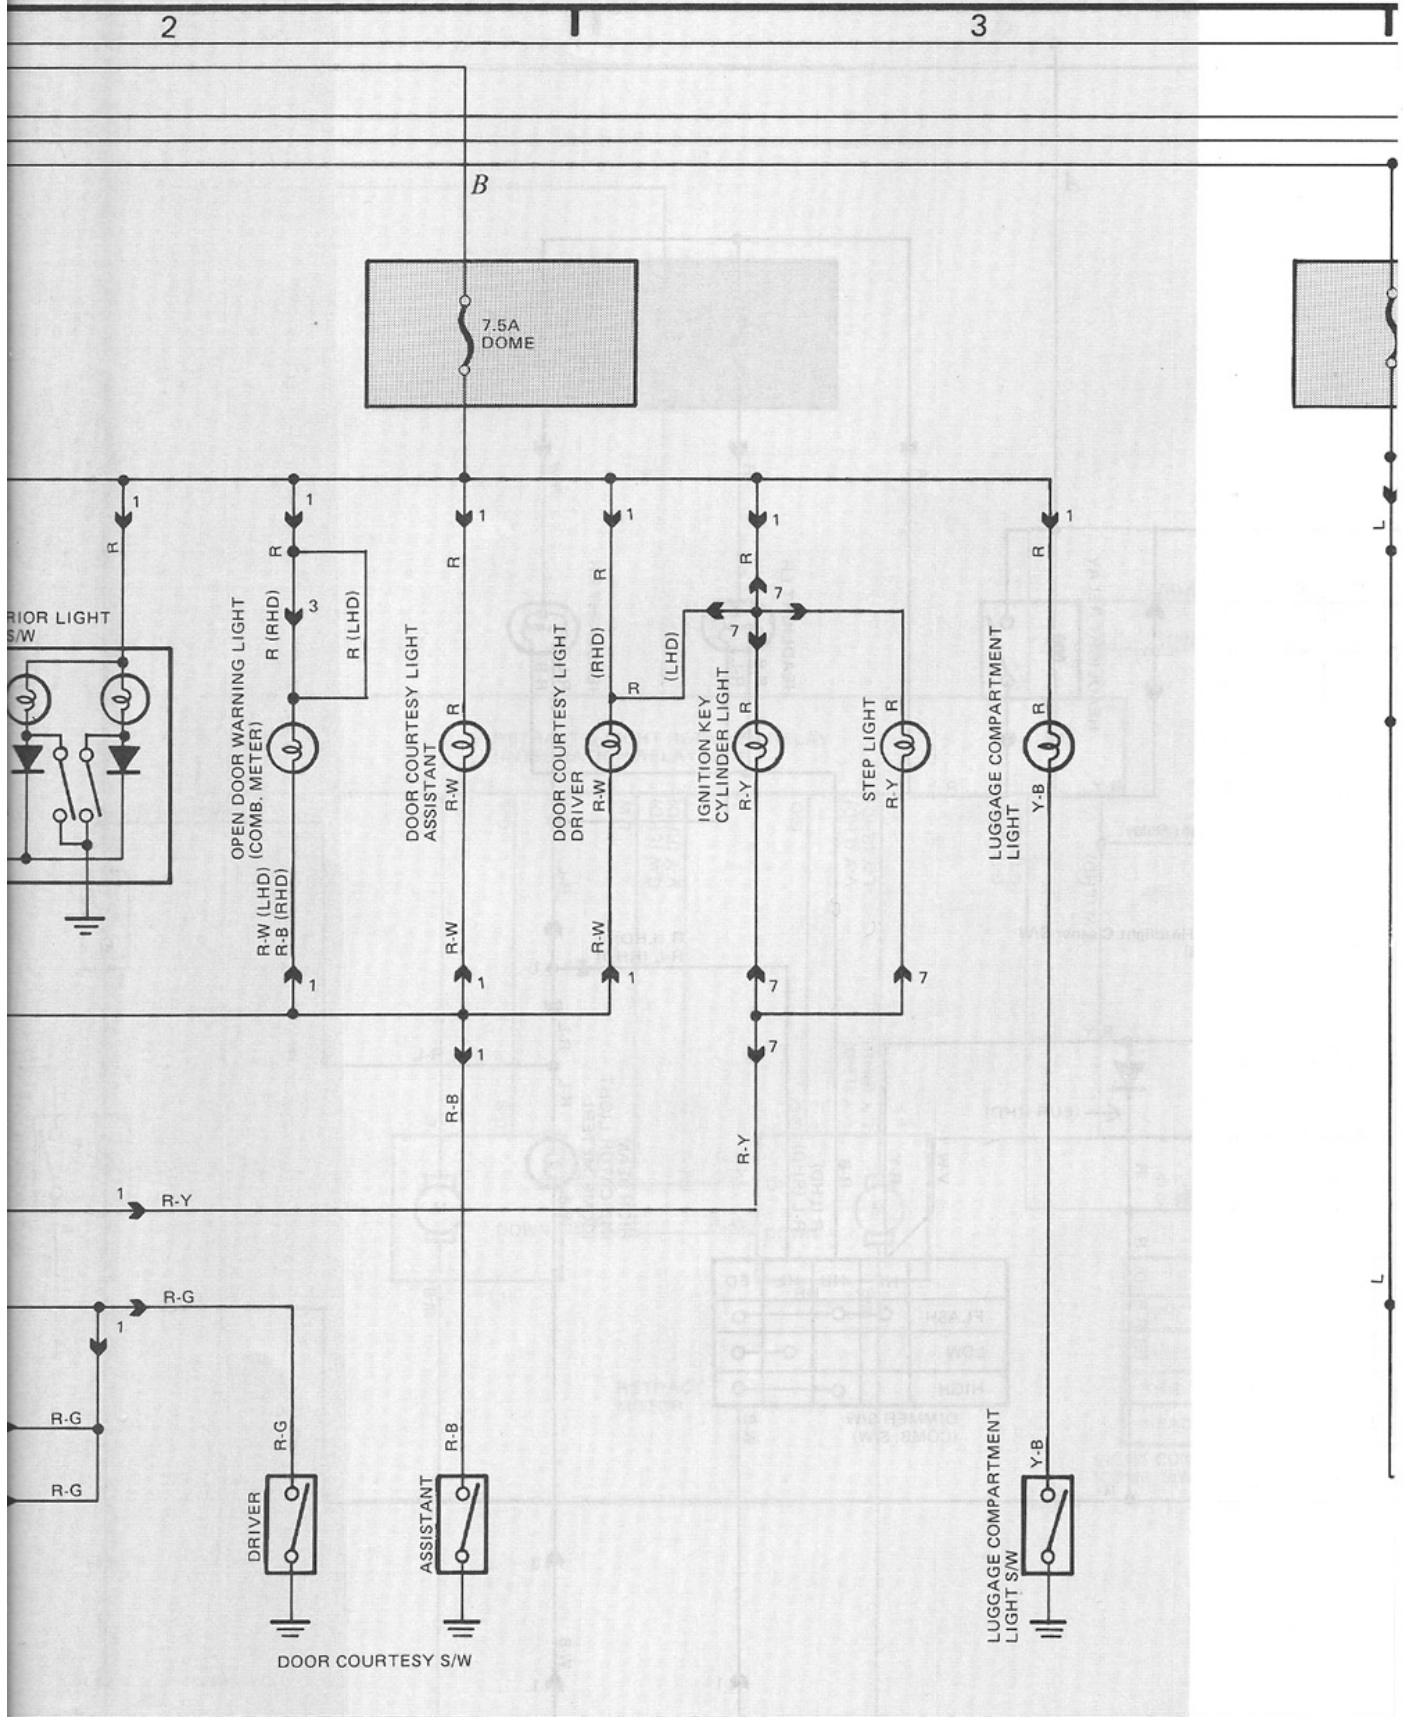

left front pillar (LHD)  
right front pillar (RHD)

*d* = Located under right front pillar (LHD)  
Located under left front pillar (RHD)

*f* = Located on center of back panel

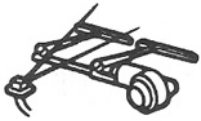

Front Wiper and Washer




Rear Wiper and V

4

5

F


20A  
WIPER

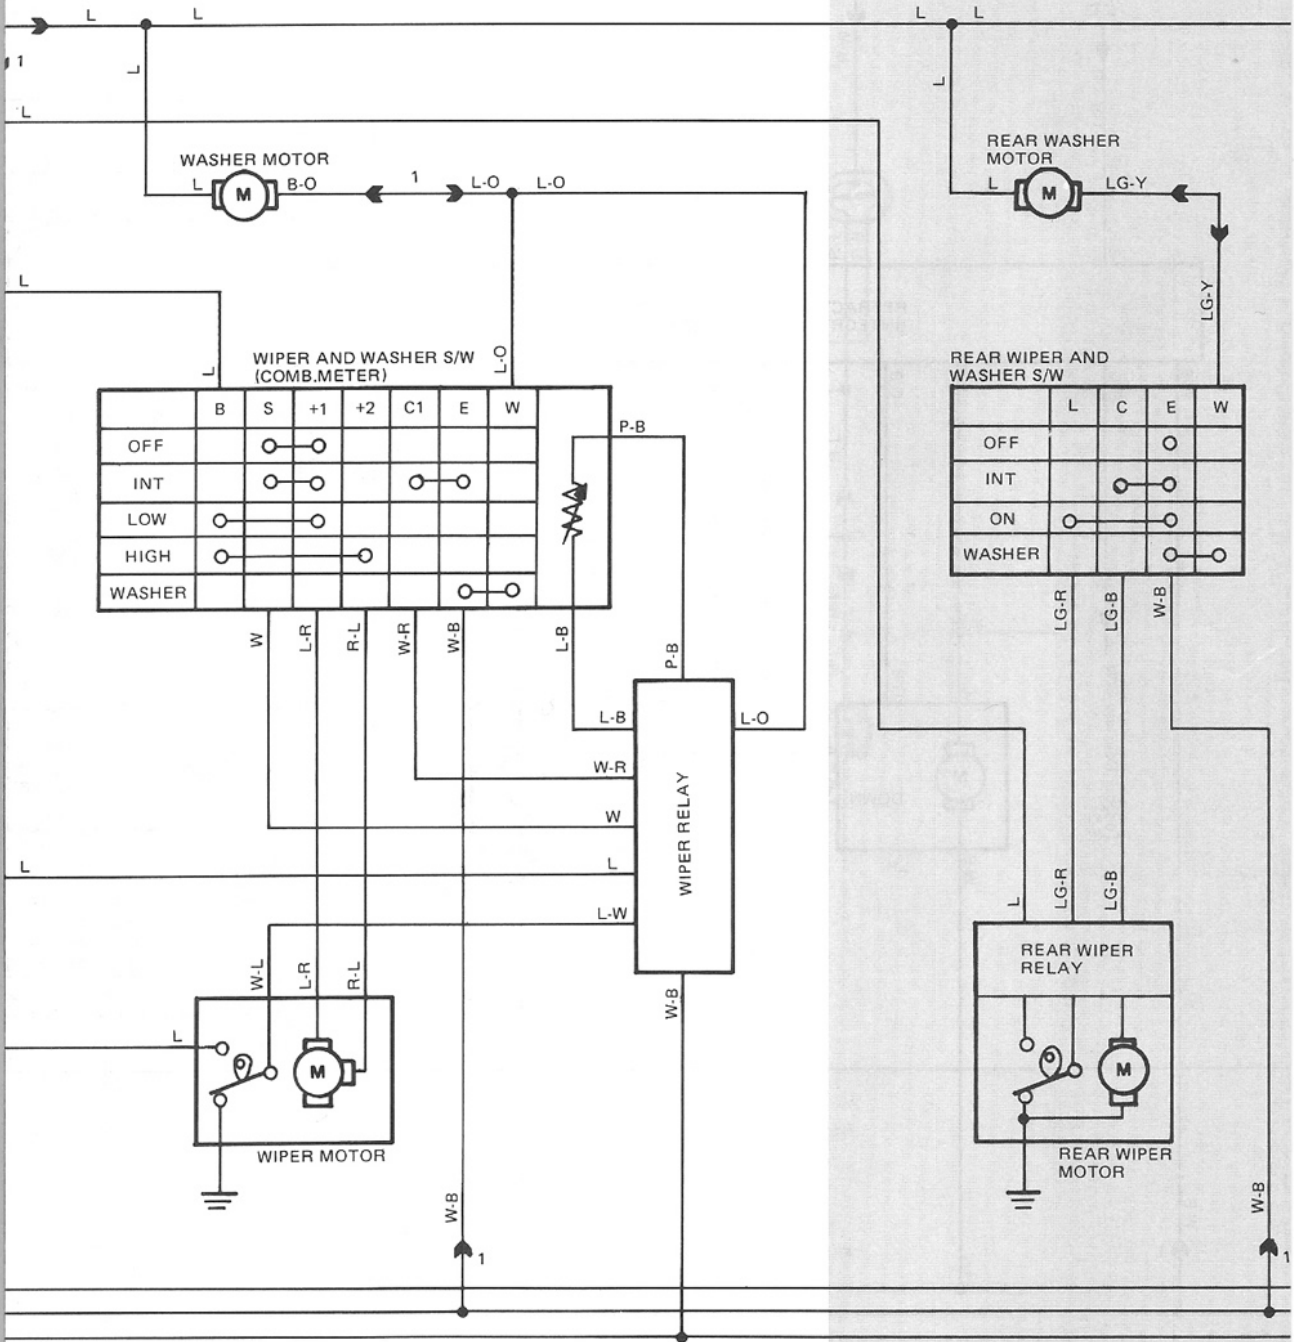



5

6

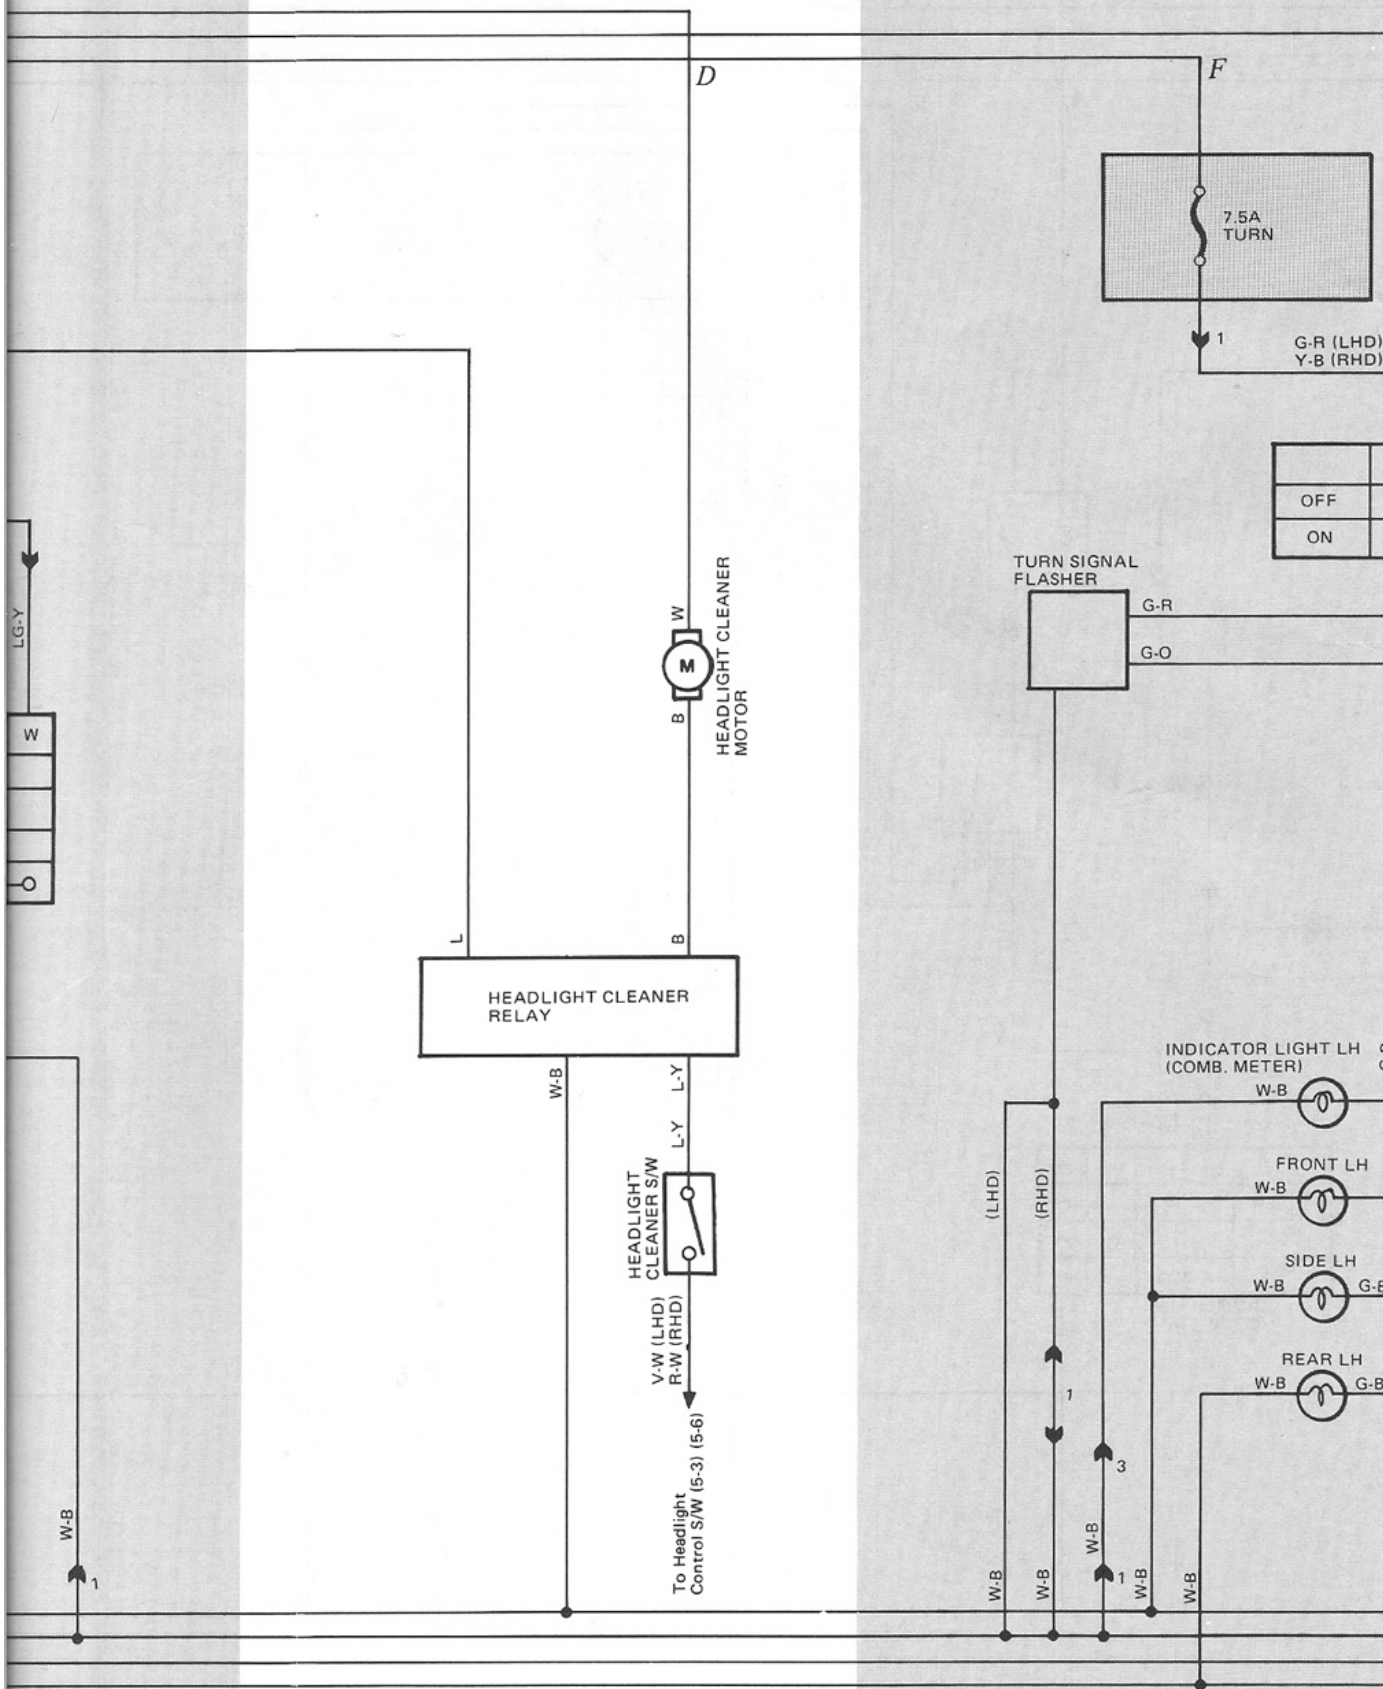

OFF
ON

INDICATOR LIGHT LH (COMB. METER)

FRONT LH

SIDE LH

REAR LH






Turn Signal and Hazard



Horn

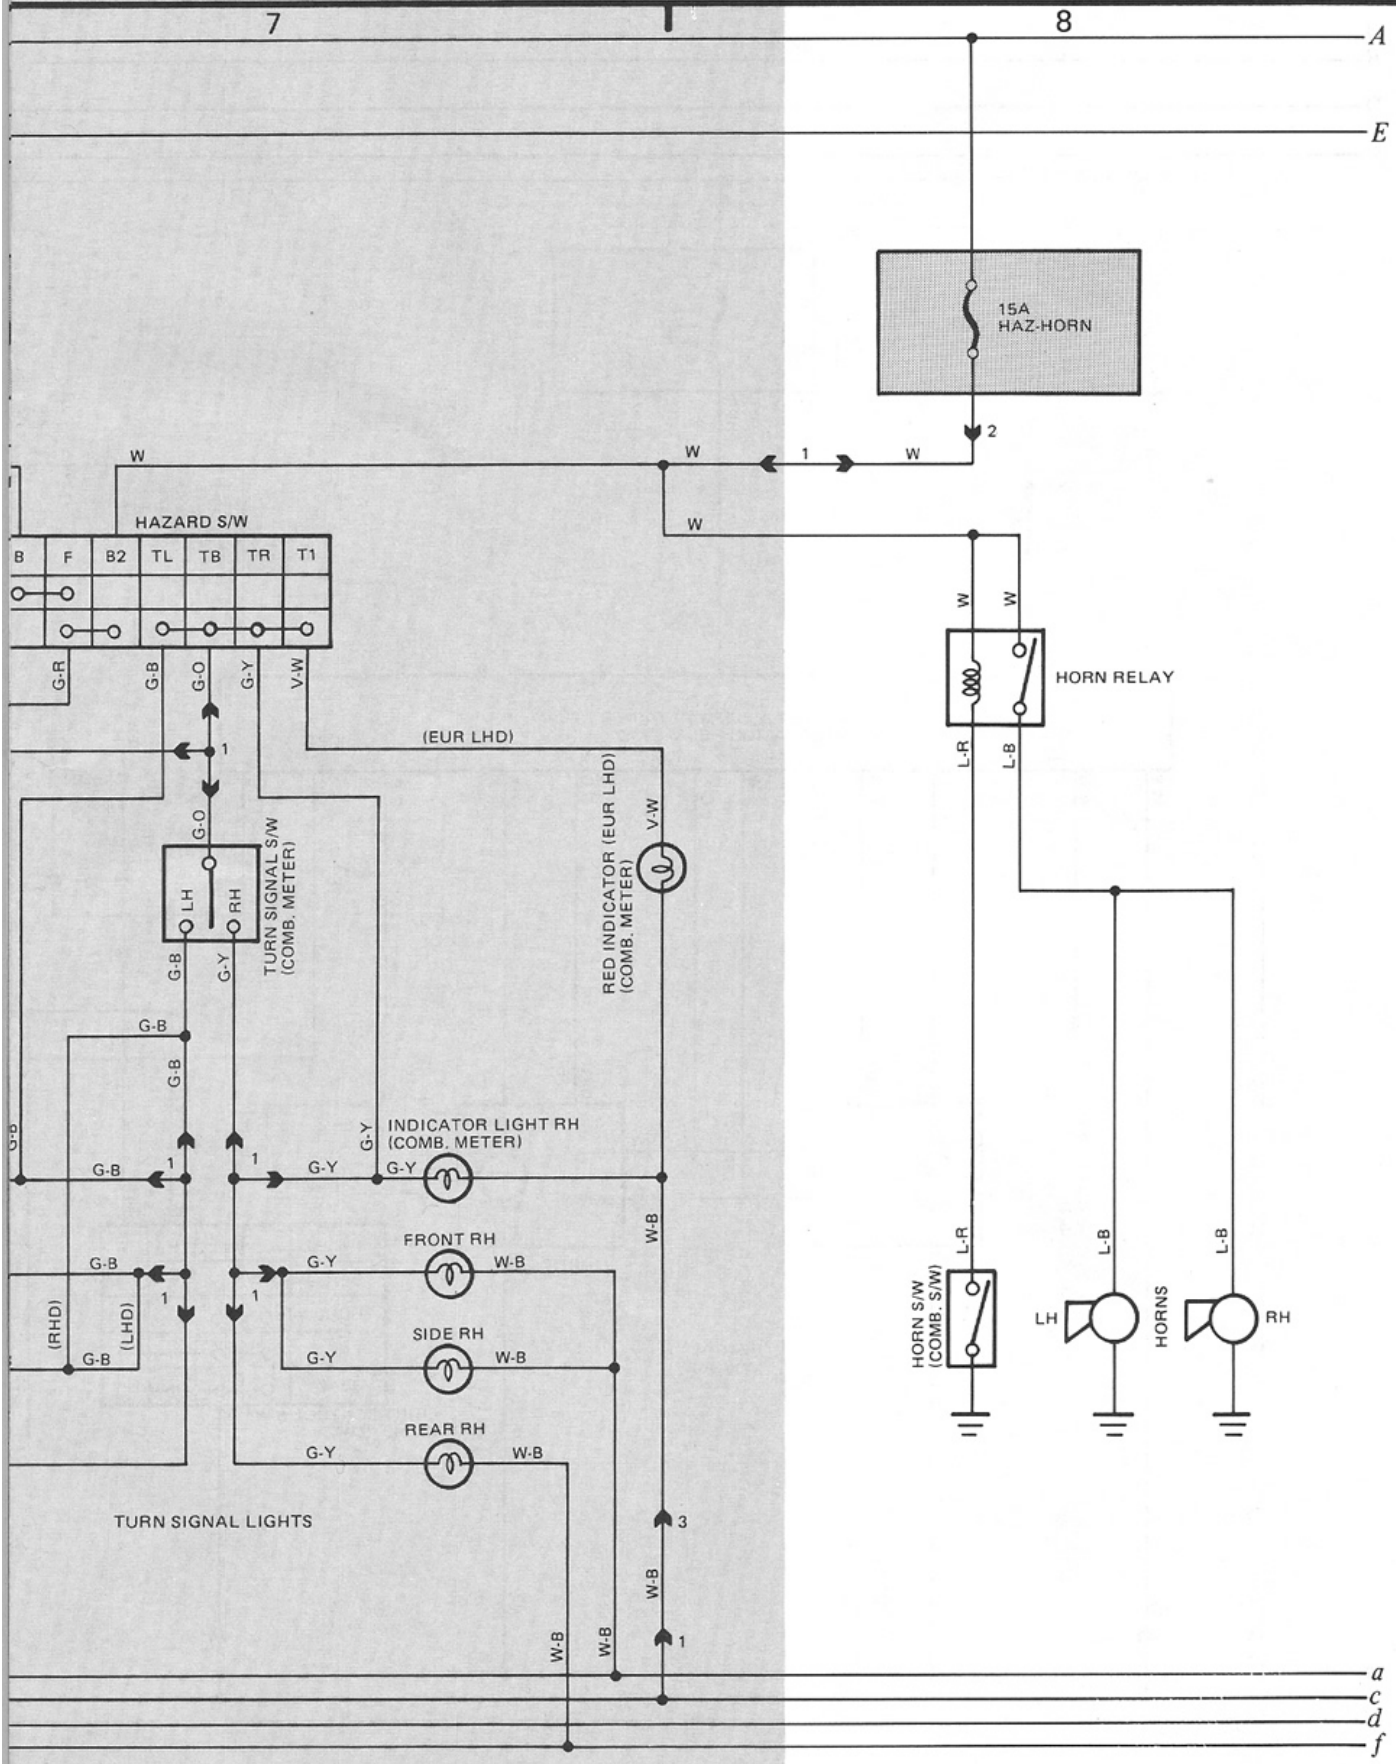


# TOYOTA SUPRA (Cont'd)



Power Windows



Power Seats

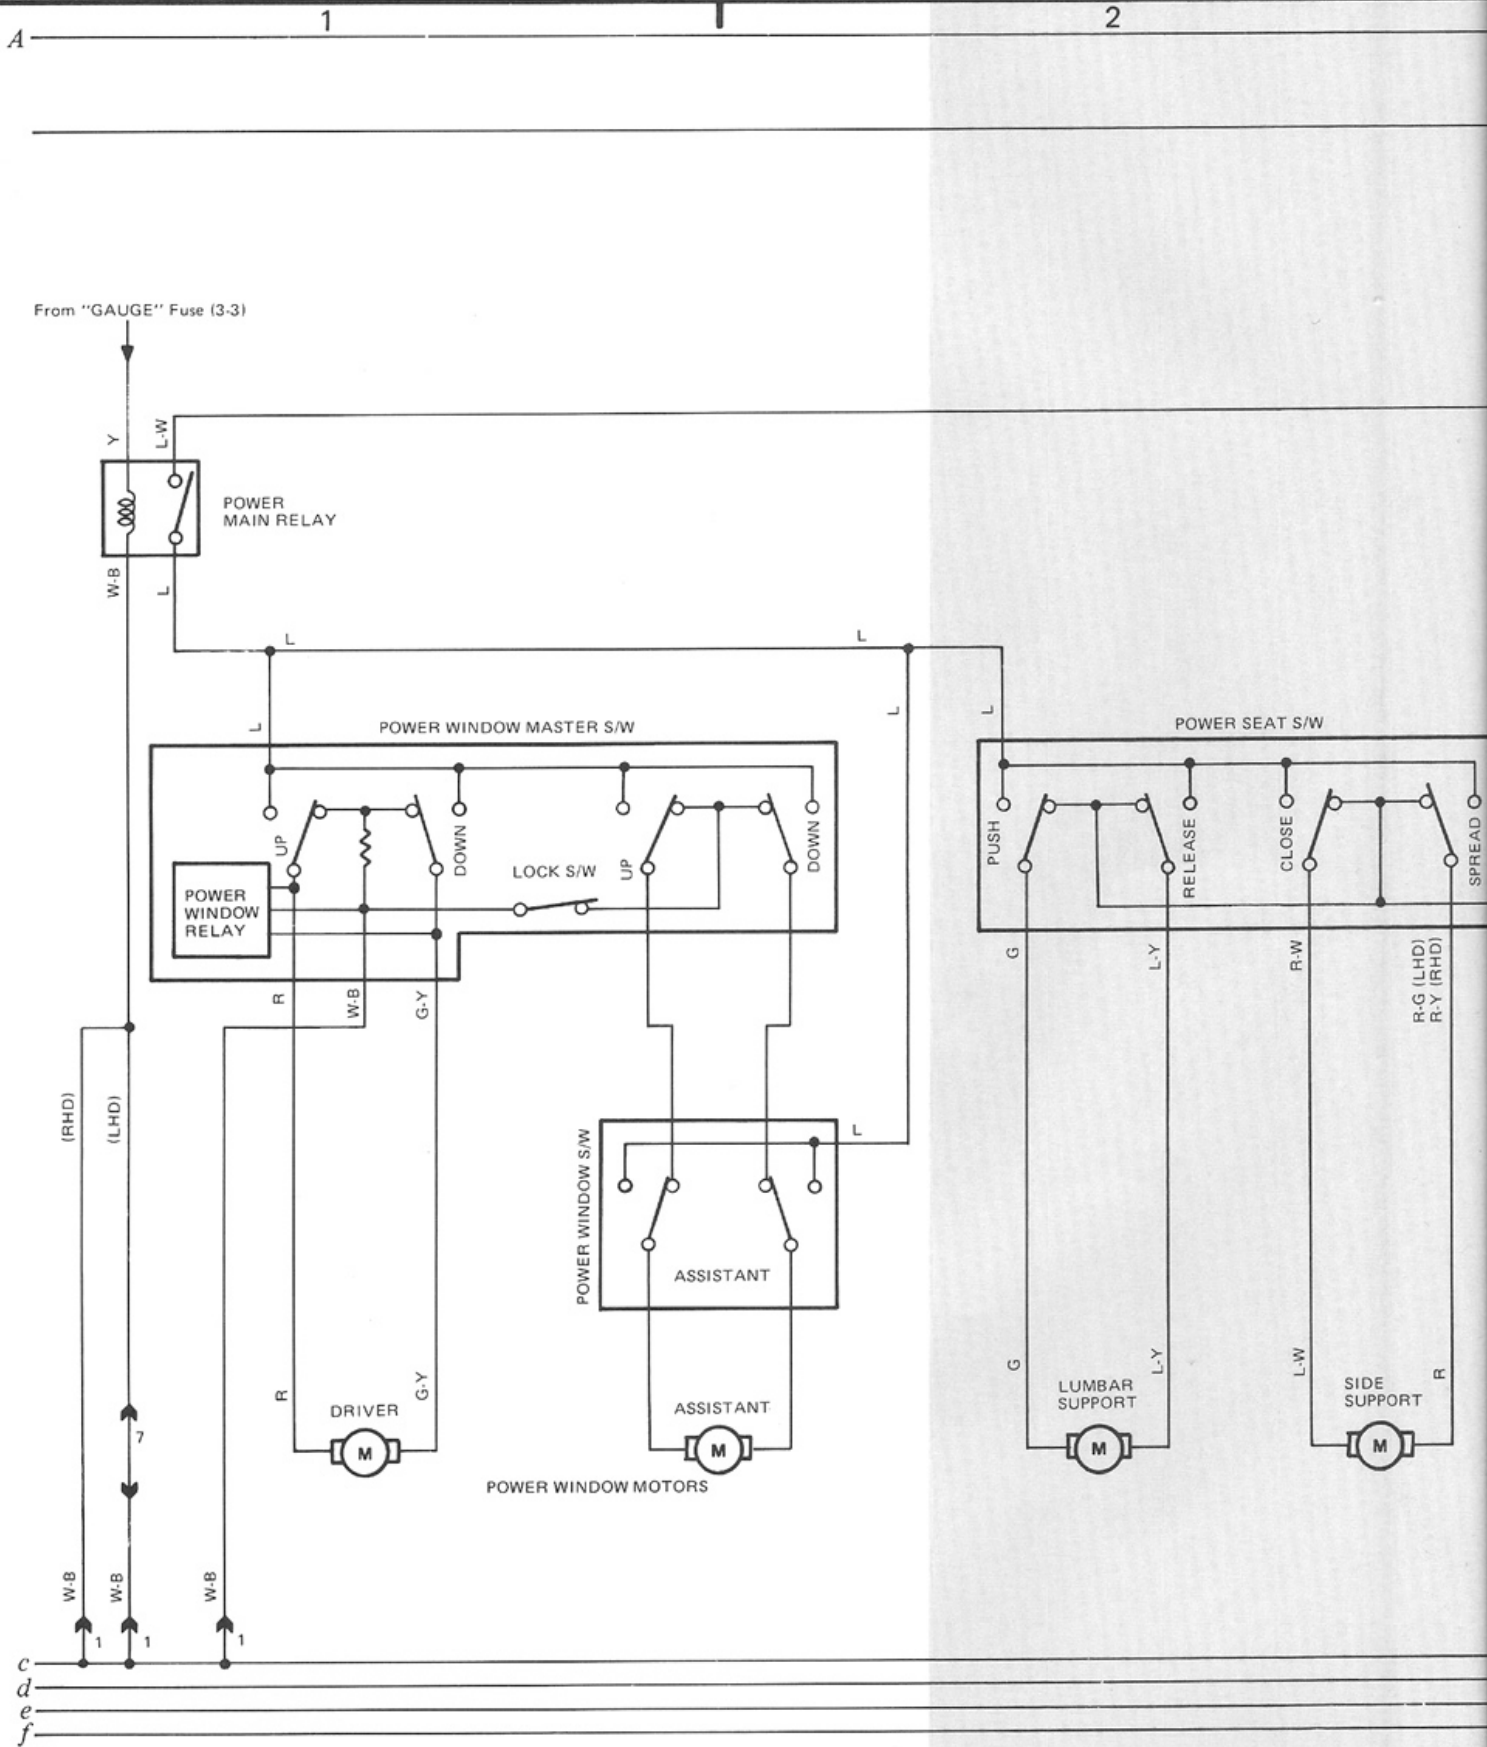

C = Located under left front pillar (LHD)  
Located under right front pillar (RHD)

d = Located under right front pillar (LHD)  
Located under left front pillar (RHD)

e = L




Power Seats





Door Locks

3

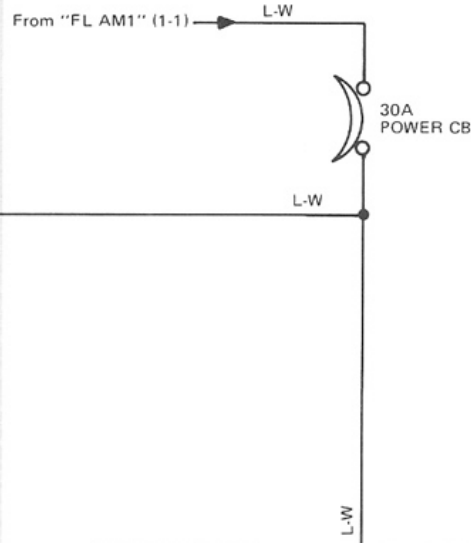

R SEAT S/W

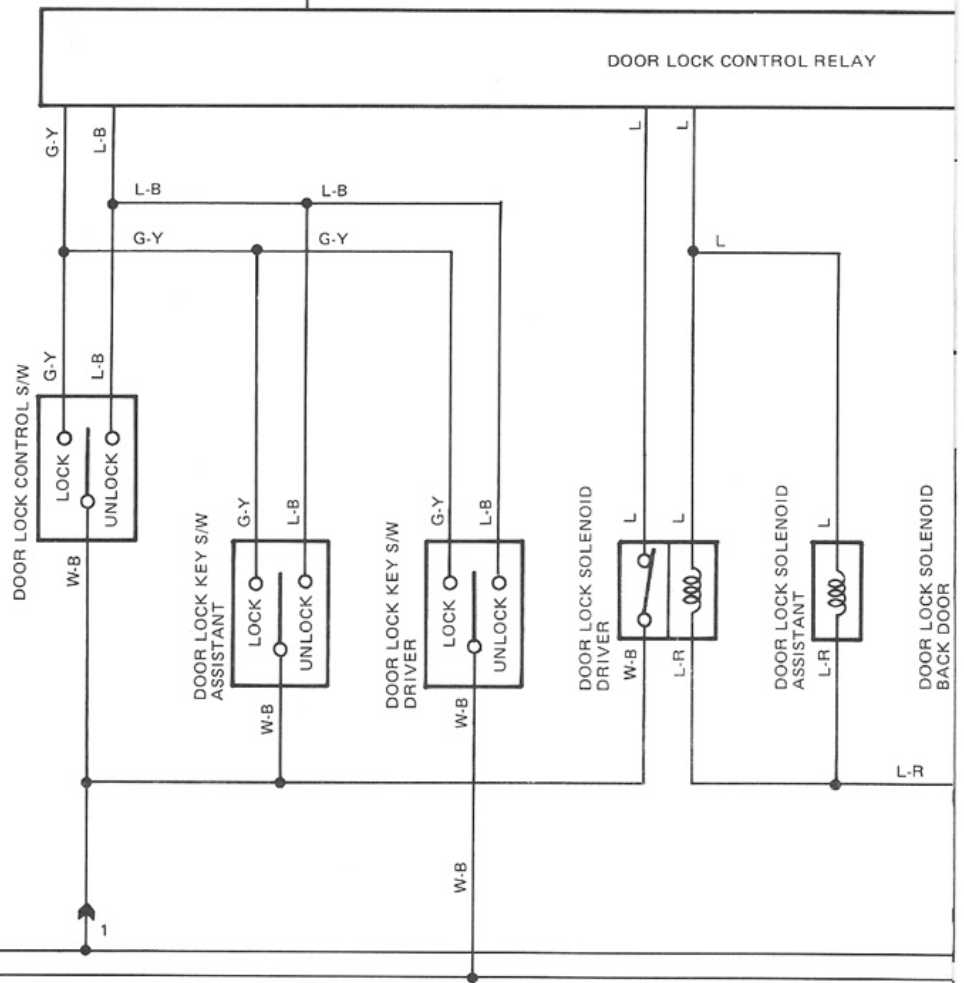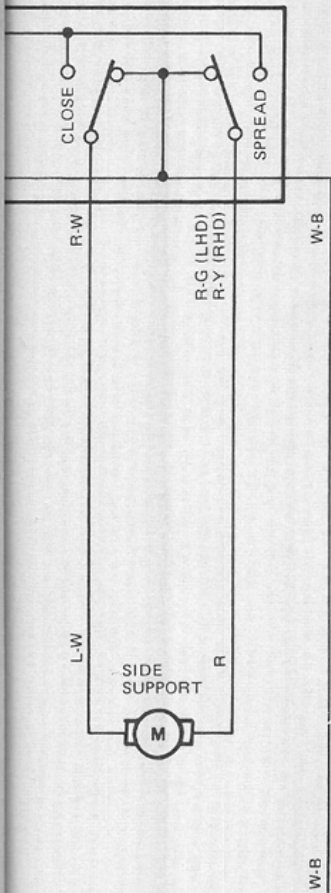

e = Located Behind Radio

f = Located on center of back panel






Clock



Cigarette Lighter


4

5

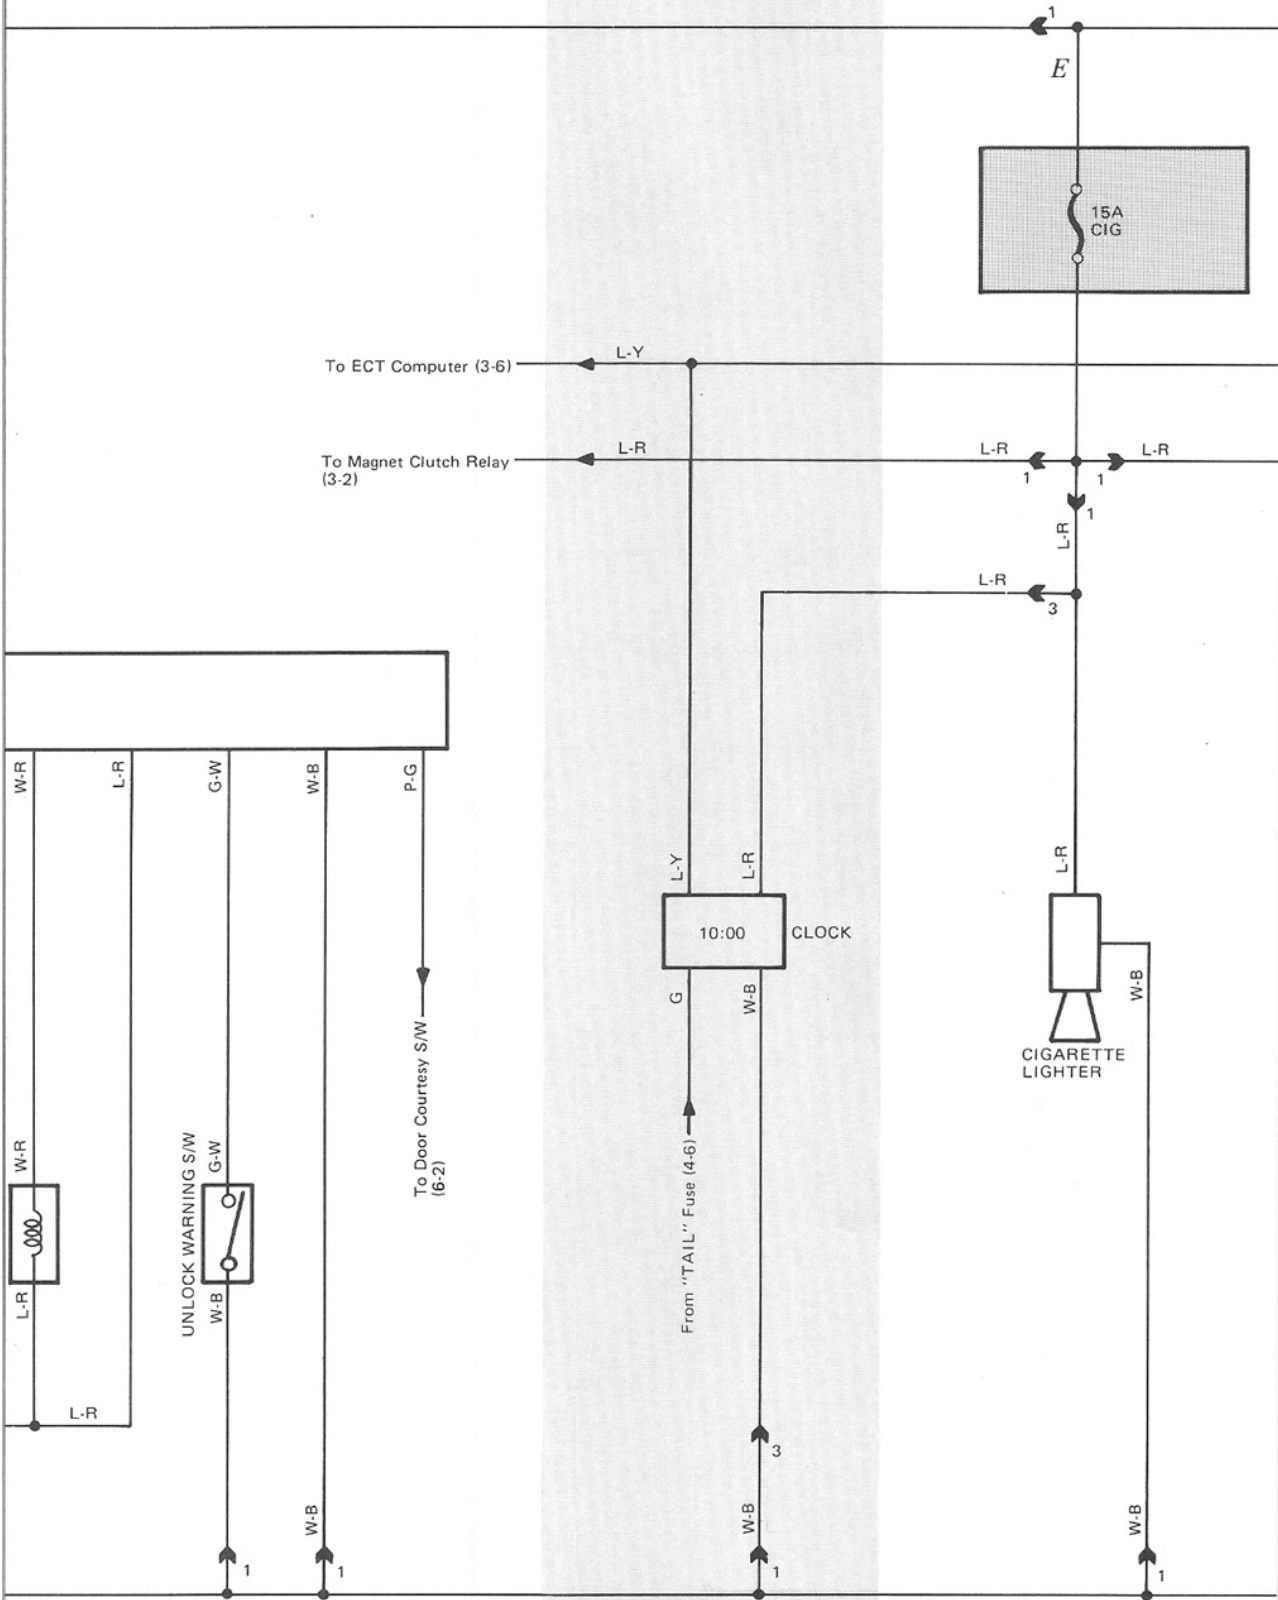





Auto Antenna

 


Radio and Tape Player

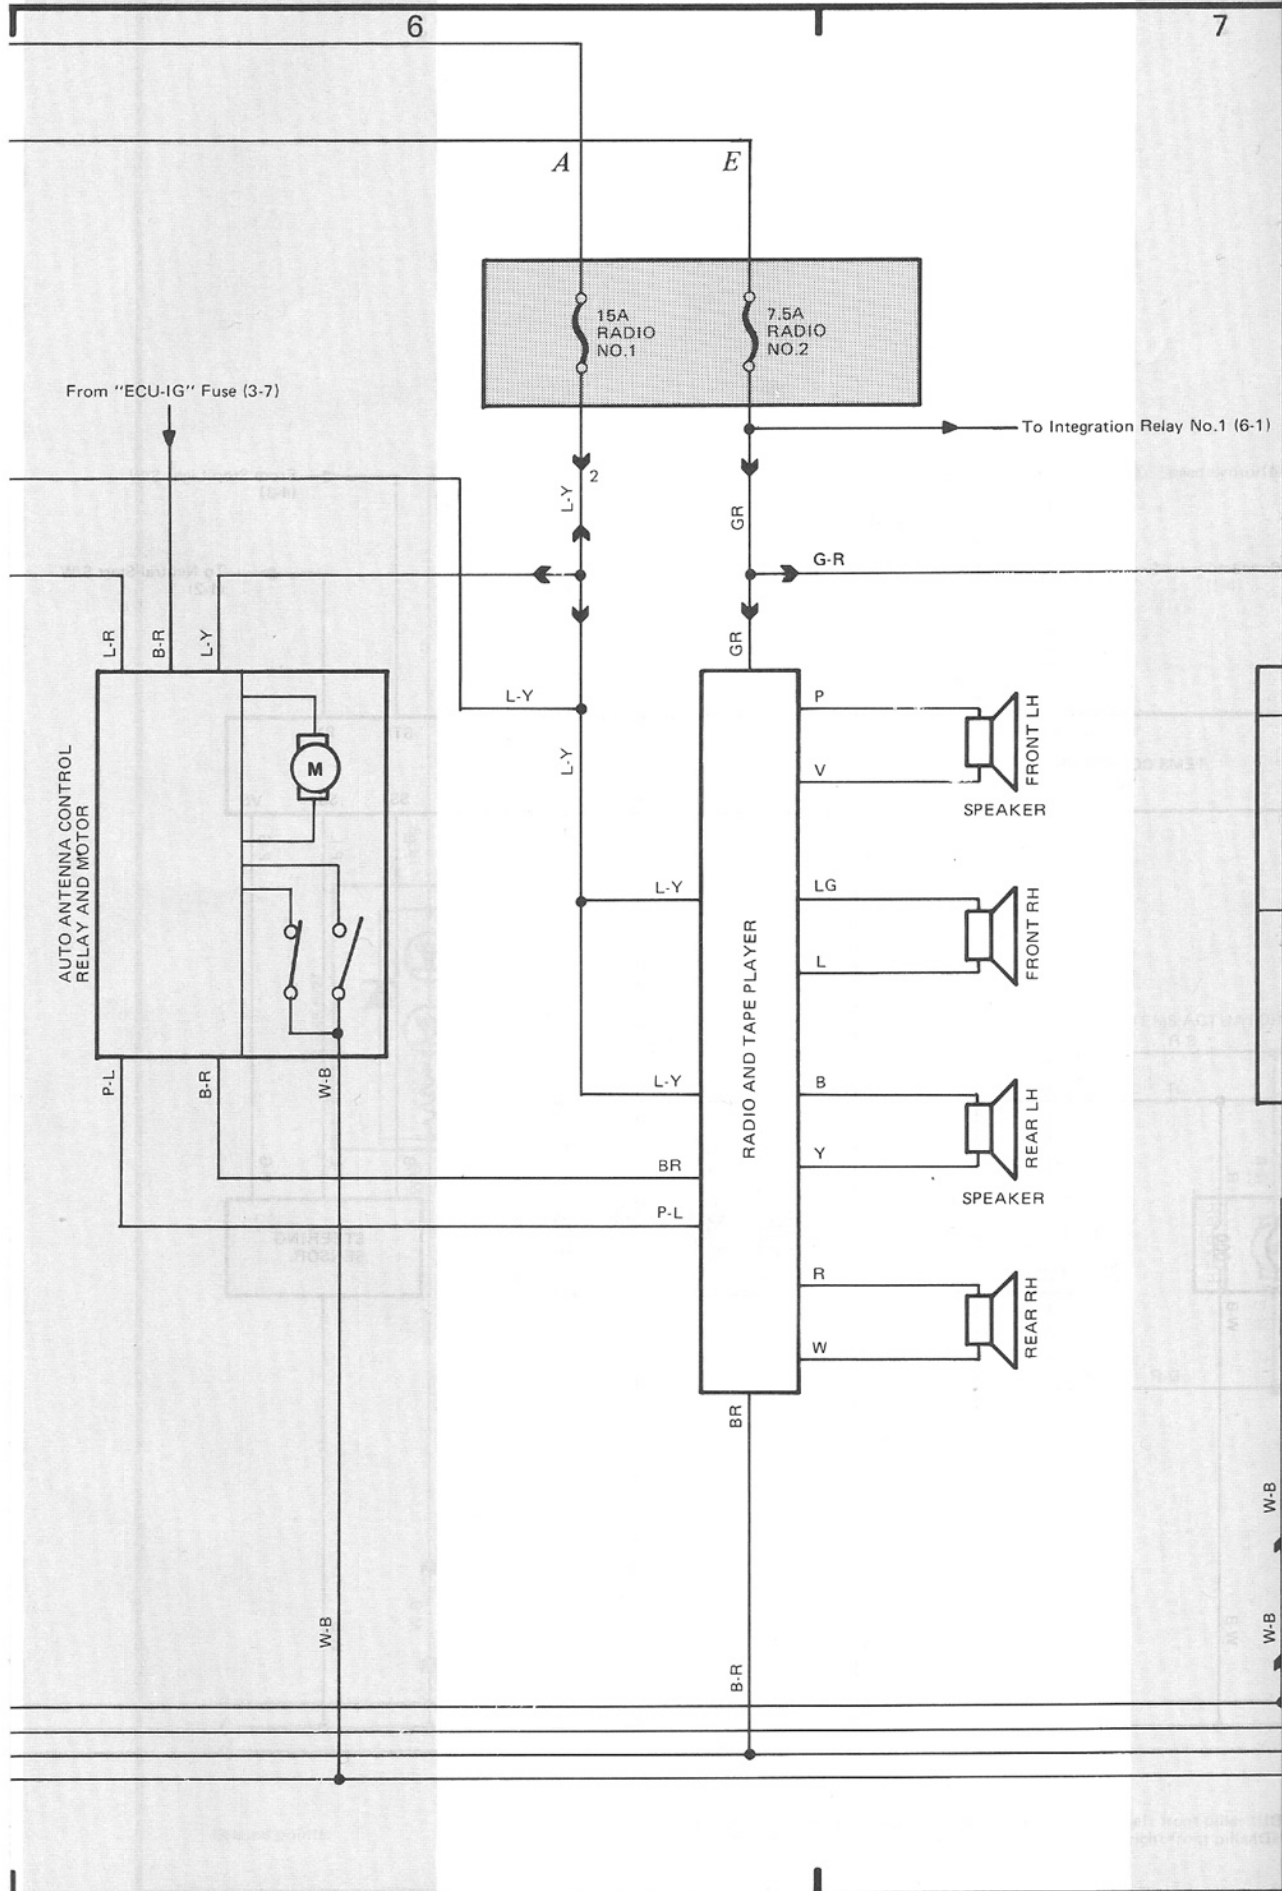

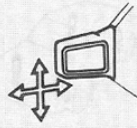

Remote Control Mirrors with Heater


8

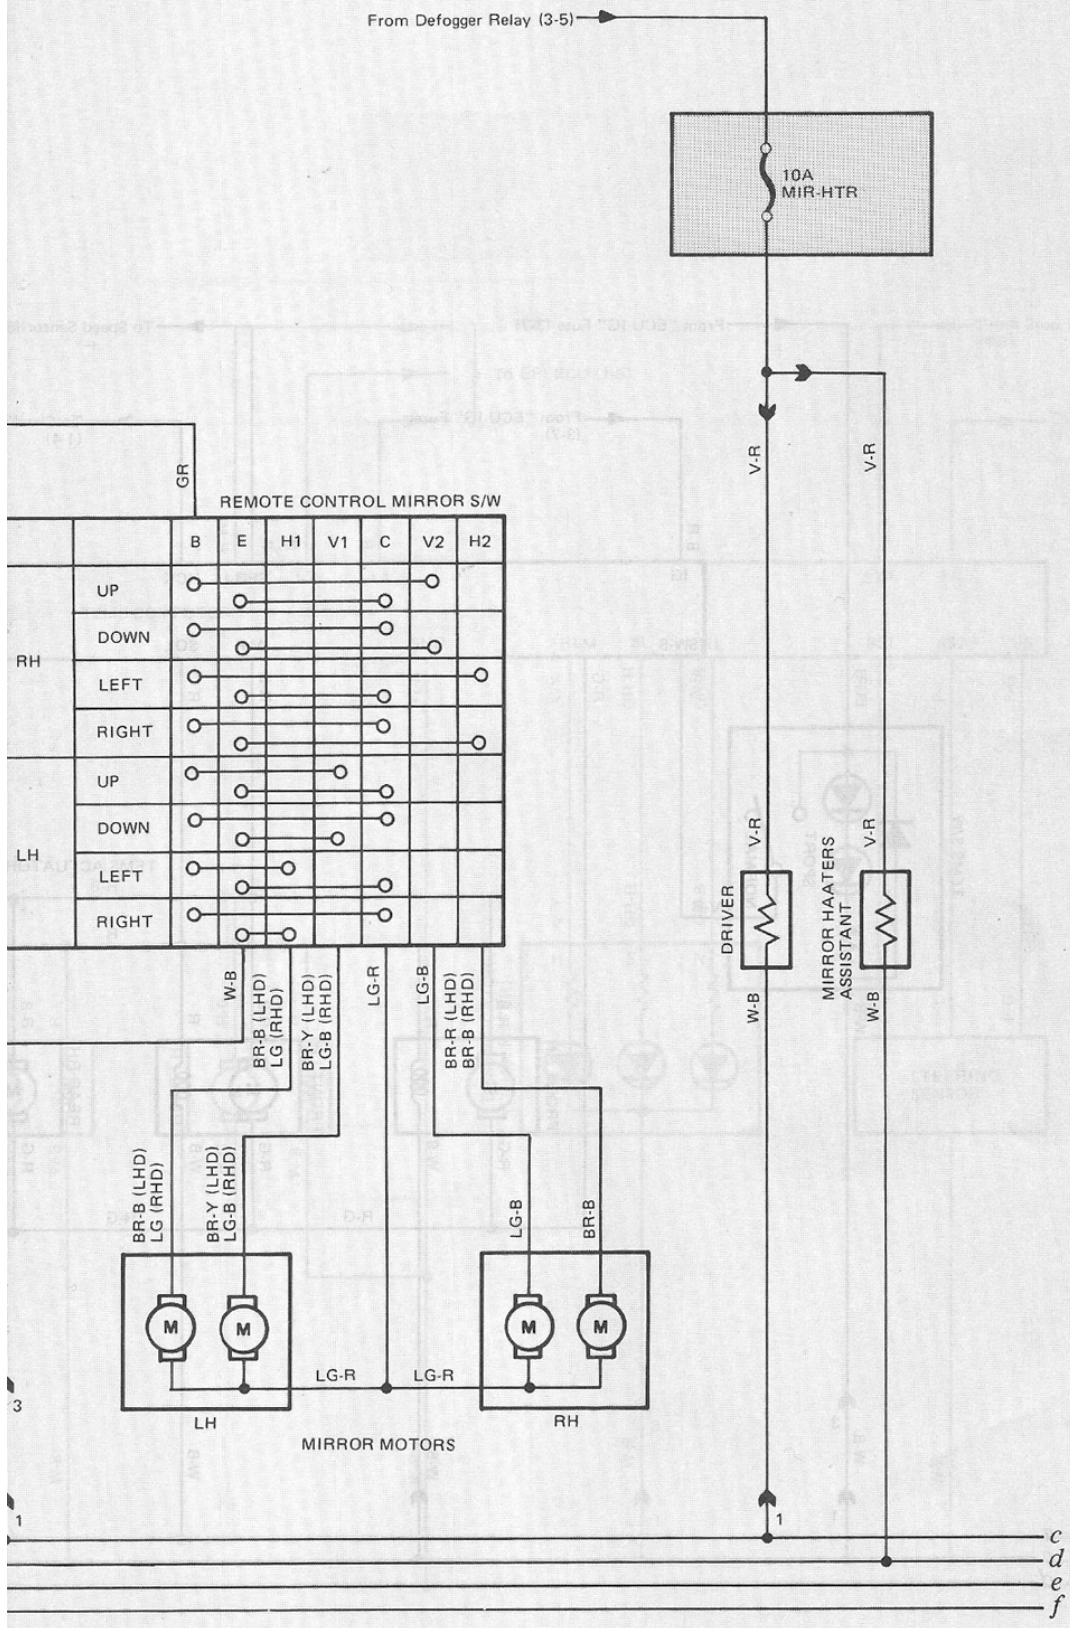

# 8 TOYOTA SUPRA (Cont'd)

1


2

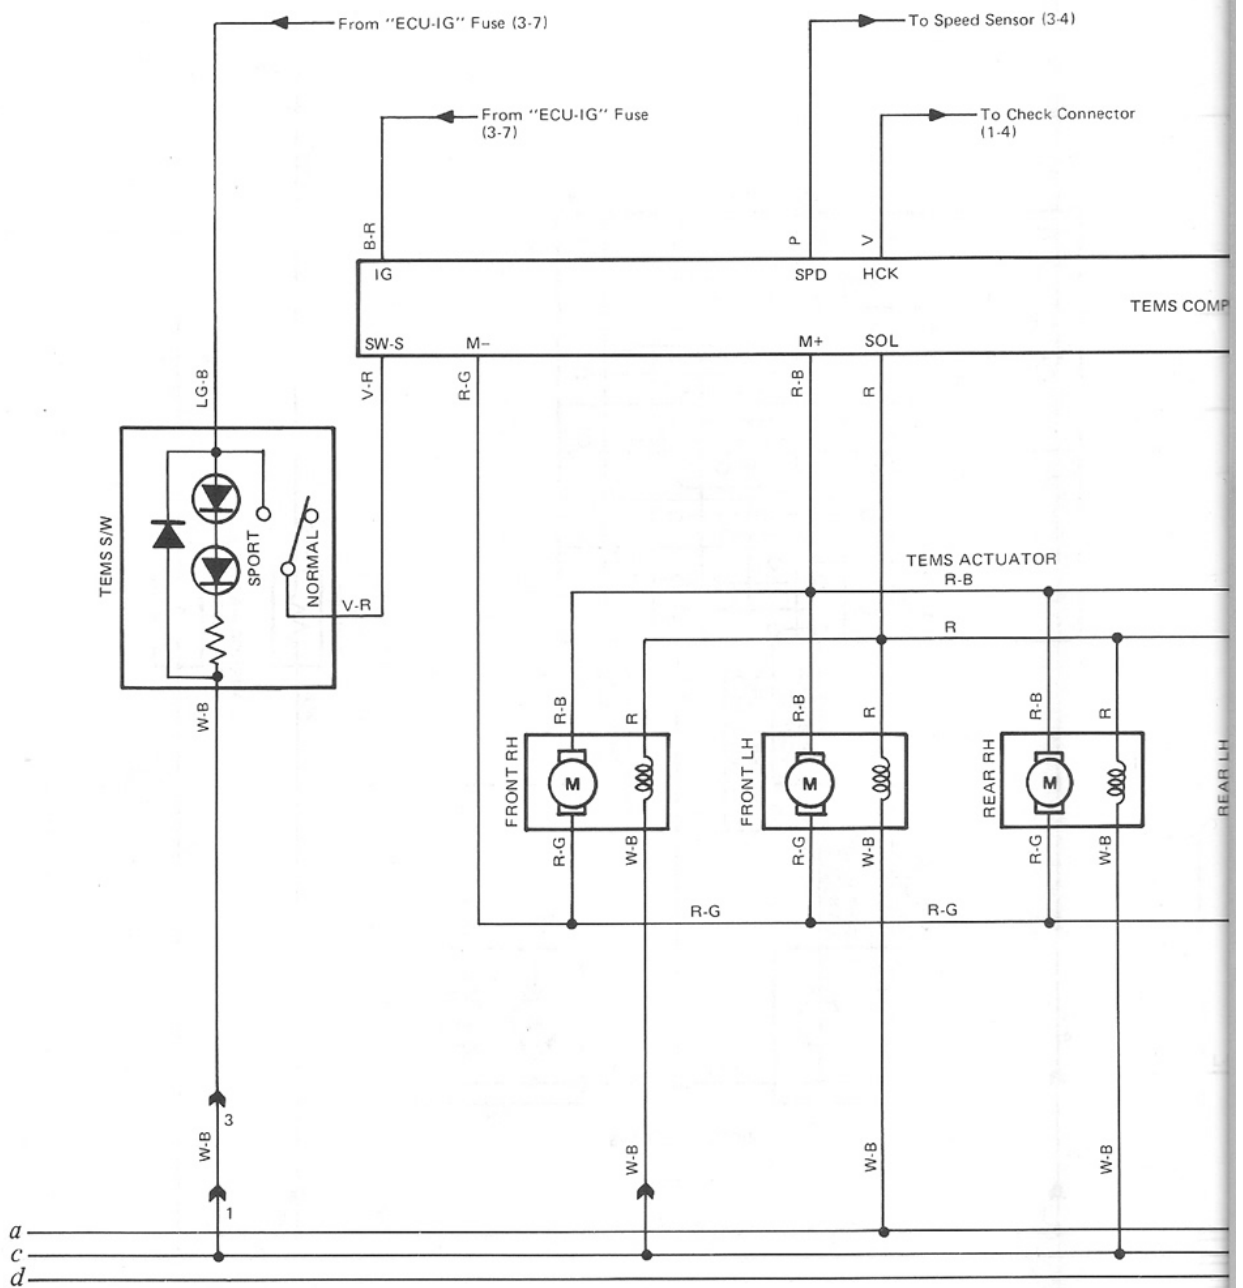

Ground points

a = Located on left front fender


c = Located under left front pillar (LHD)  
Located under right front pillar (RHD)

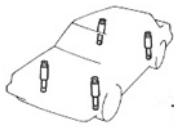

TEMS

2

3

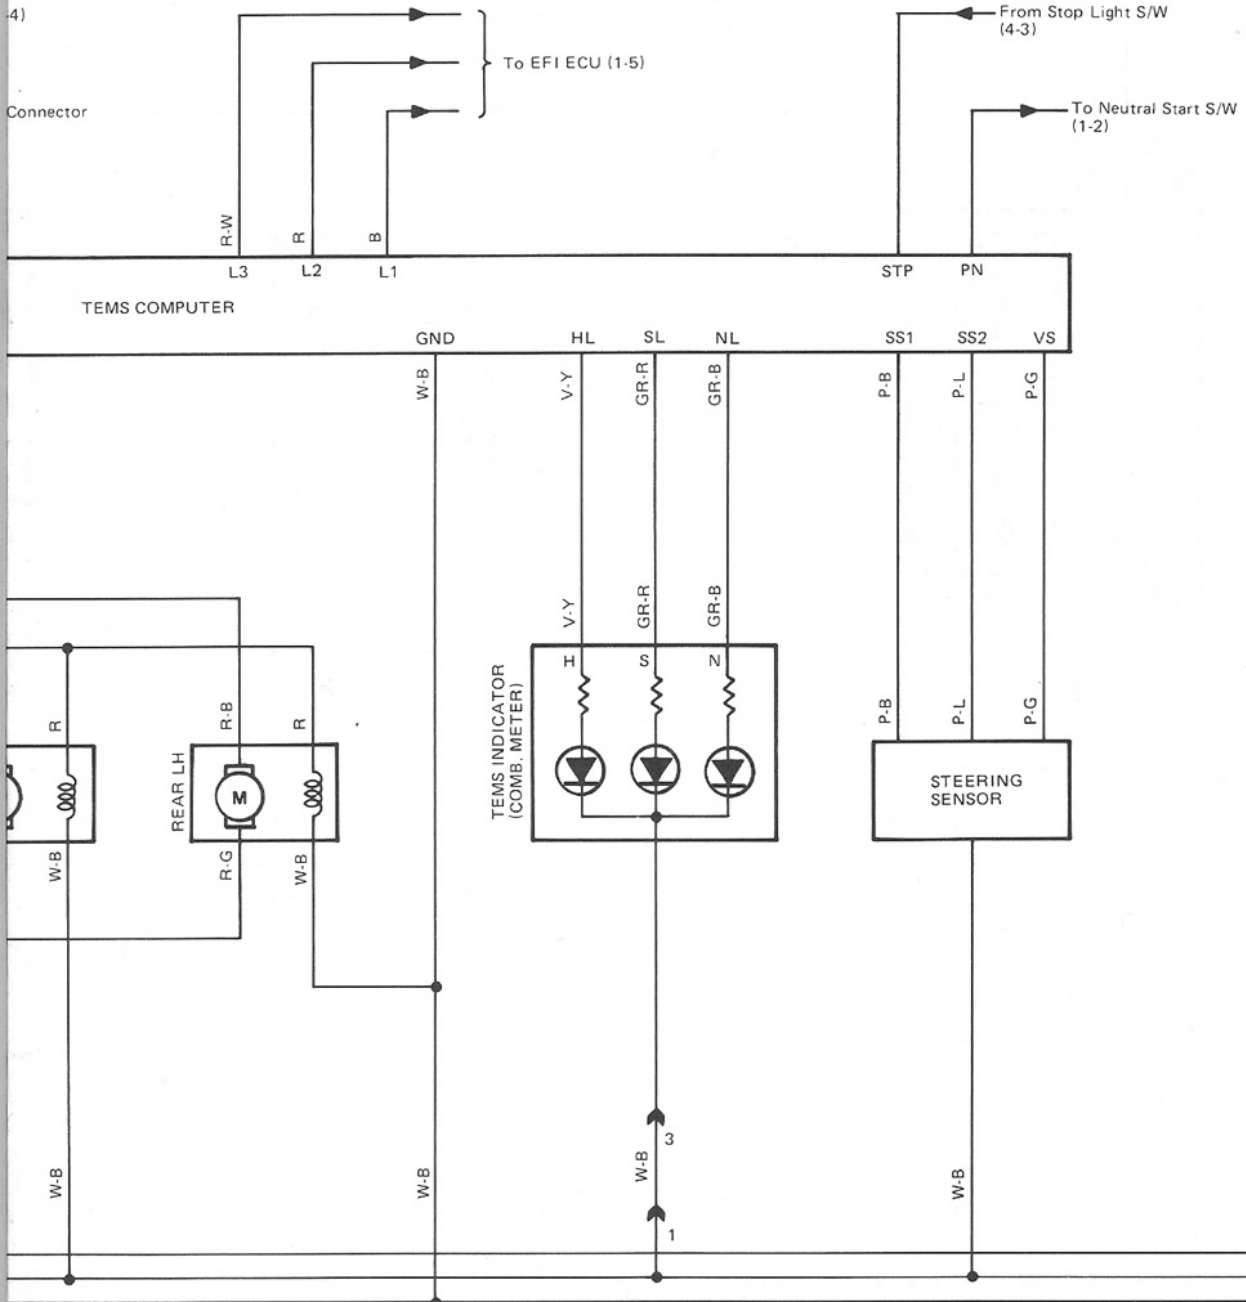

D)  
HD)

*d* = Located under right front pillar (LHD)  
Located under left front pillar (RHD)